

**WALTON**  
Smart TV

**Coolita**

---

## **User Manual**

---



To obtain the best performance and safety, please read this manual carefully.  
Please keep this manual for future reference.

# Contents

 
Setup Wizard .....	3
Home page .....	6
Input .....	7
Setup .....	8
Network Settings .....	9
Image Settings .....	10
Sound Settings .....	13
General Settings .....	15
About This Device .....	21
Channel setting .....	22
Media .....	29

# Setup Wizard

The system setting will appear when you open the TV on the first time.  
Please set according to the on-screen guide. Press **OK** button to start the setup.  
Press **▼ / ▲** button to select the language and press OK button to turn to next page.



Press **▼ / ▲** button to select Country and press OK button to turn to next page..

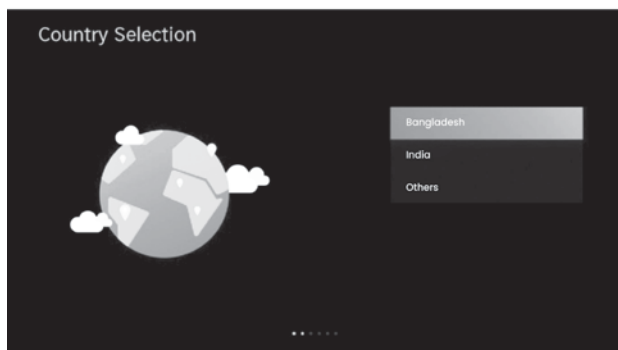


Press **▼ / ▲** button to select Time Zone and press OK button to turn to next page..




---

 Press ▼ / ▲ button to select Environment and press OK button to turn to next page.

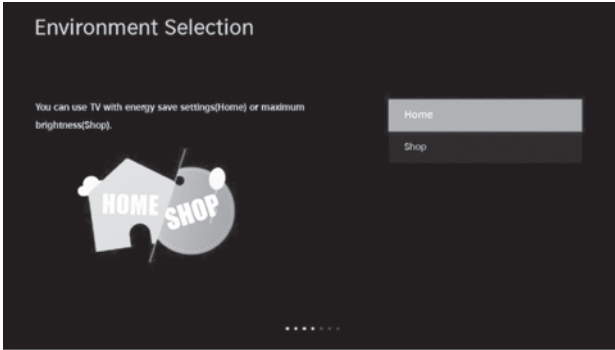

 
Select and agree the agreement, then select "Next" button to the next page.

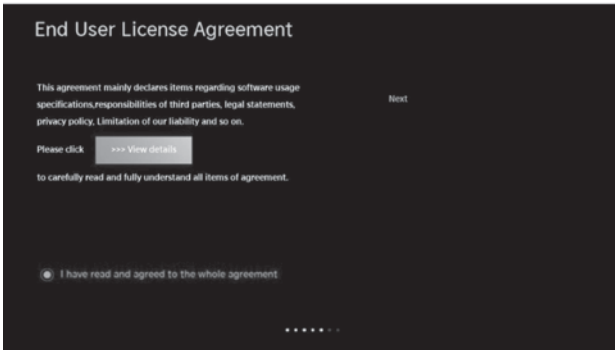


Press ▼ / ▲ button to select Network and press OK button to turn to next page.




Select "Accept" to agree to the Terms of Use & Privacy Policy, and then choose to enable specific additional service above by individually selecting.

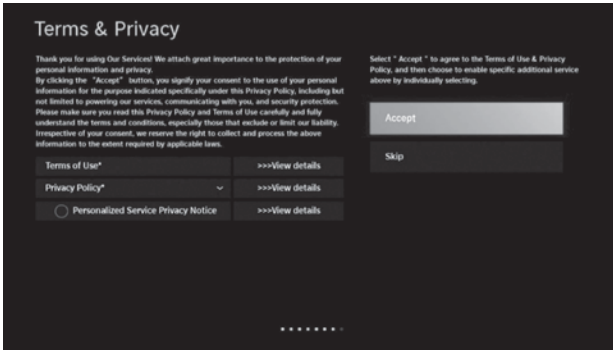

 Choose different ways to activate your smart TV system.

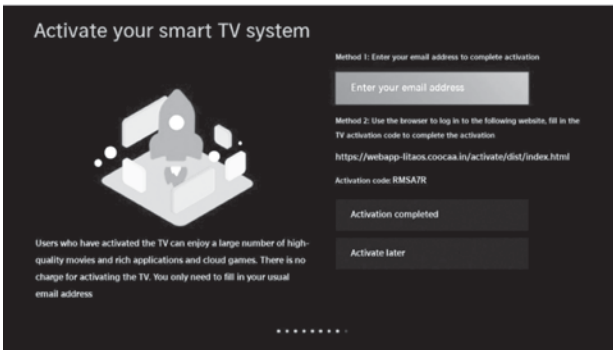

Press ▼ / ▲ button to select TV source and scan channel.

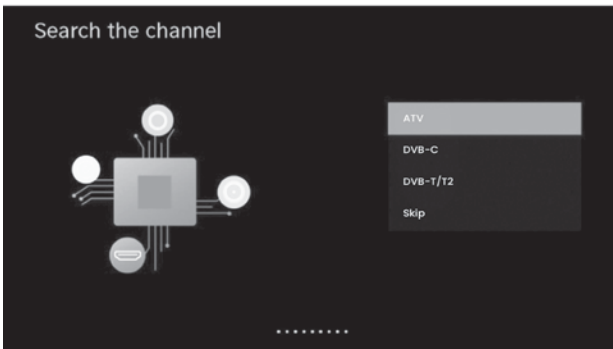


# Home page

Enter the Home page after scan channel.



Press ▼ / ▲ / ◀ / ▶ button to select input on the Home page.

 Press ◀ / ▶ button to select For You/Anime/Movies/TV Shows/Kids/Short Videos.

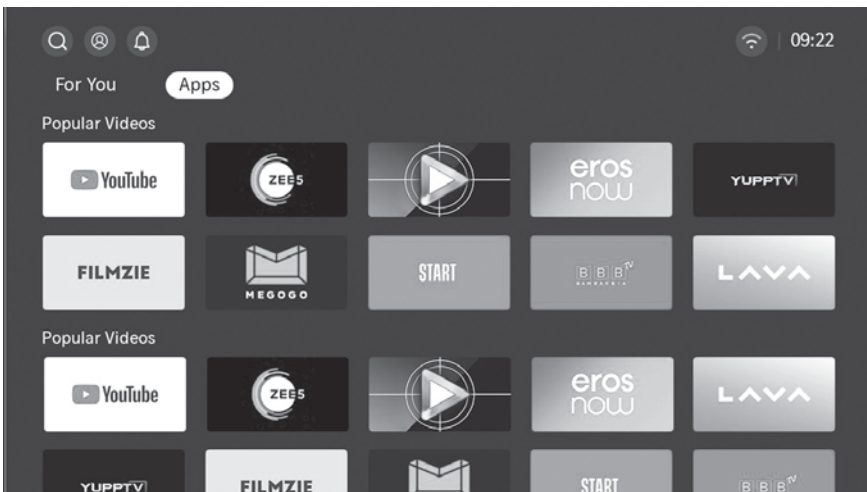

# Input

 
Press ▼ / ▲ / ◀ / ▶ button to select input on the Home page.

Press ▼ / ▲ button to select ATV/DVB-C/DVB-T/T2/AV1/AV2/HDMI1/HDMI2.

Or press **Input** button, and press ◀ / ▶ button to select Source.

Press ▼ / ▲ button to select the input source you want.

Press **OK** button to enter. Press **EXIT** button to quit.

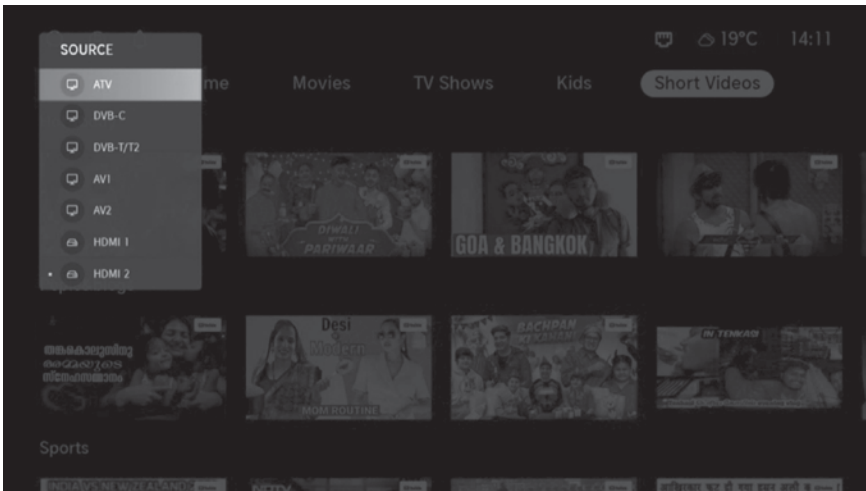


# Setup

Press **MENU** button to enter the Setup.

Press ◀ / ▶ button to highlight the desired menu icon , and press **OK** button to select.

( Optional:Network Settings/Image Settings/Sound Settings/General Settings/About This Device)

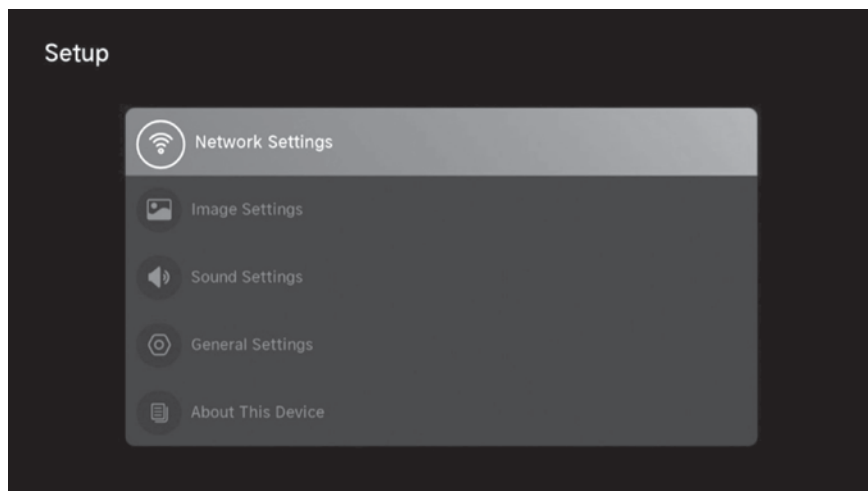




---

# Network Settings

 Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select **Network Settings**.

Press **OK** button to enter the sub-menu.

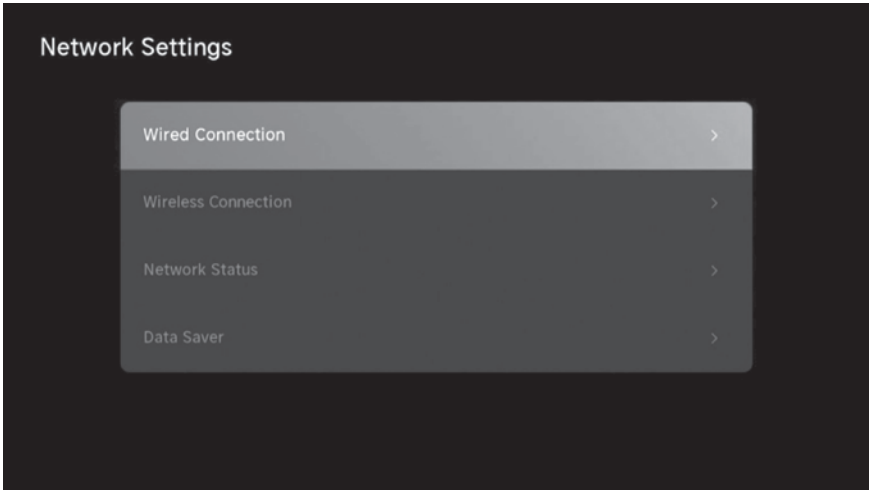

Press **▼ / ▲** button to select Wired Connection/Wireless Connection/Network Status/Data Saver.  
Press **OK** button to enter sub-menu and setup.


---

# Image Settings

 Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select **Image Settings**.

Press **OK** button to enter the sub-menu.

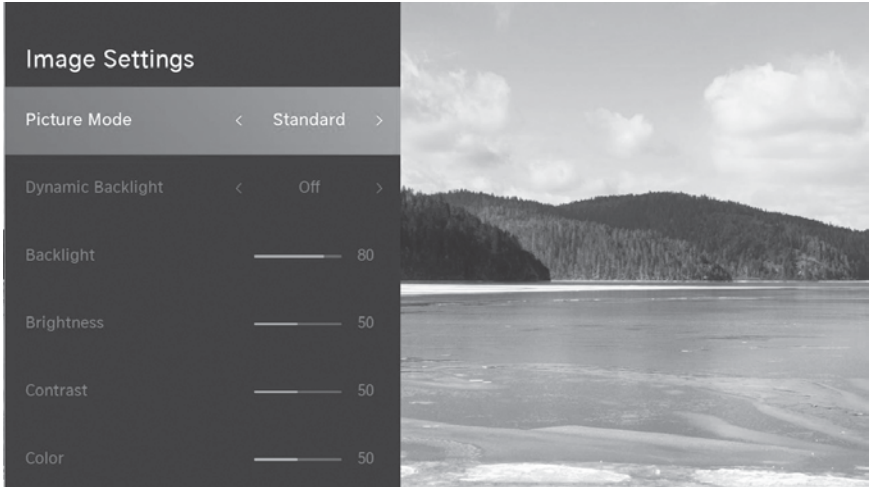

## Picture Mode

Highlight the item and press **OK** button to enter the sub-menu, that shows the picture mode you can choose.

Press **◀ / ▶** button to select Standard/Dynamic/Soft/Vivid/User.

**Standard** Produces a standard image.

**Vivid** Enhance the contrast, color and clarity of the screen to make the color more vivid.

**Eco** Reduce screen brightness, improved contrast for energy saving.

**Movie** This mode is more suitable for watching movies.

**Game** This mode is more suitable for playing games.

**Sport** This mode is more suitable for sport programs.

**User** Select to customize picture settings.

## Dynamic Backlight

Press **▼ / ▲** button to select Dynamic Backlight and press **◀ / ▶** button to select On/Off

## Backlight

Press **▼ / ▲** button to select Backlight.

Press **◀ / ▶** button to adjust.

---

### Brightness/Contrast/Color/Tint/Sharpness

These terms are available only when "User" is selected in Picture Mode.

Press ▼ / ▲ button to select Contrast/Brightness/Color/Sharpness.

Press ◀ / ▶ button to adjust.

- Contrast Adjust the contrast of the image.
- Brightness Adjust the brightness of the image.
- Color Adjust the color intensity of the image.
- Sharpness Adjust the edge sharpness of the image.


### Color Temperature

Adjust the overall color of the image.

Press ▼ / ▲ button to select Color Temperature.

Press ◀ / ▶ button to select Standard/Warm/User/Cool.

- Standard The picture does not in favor of any color. The color is moderate.
- Warm The picture is in favor of red-green and less blue to make the color more vivid and soft.
- User Select to customize color temperature setting.
- Cool The picture is in favor of green-blue and less red.  
The whole color is in favor of light. The picture is more fresh and elegant.

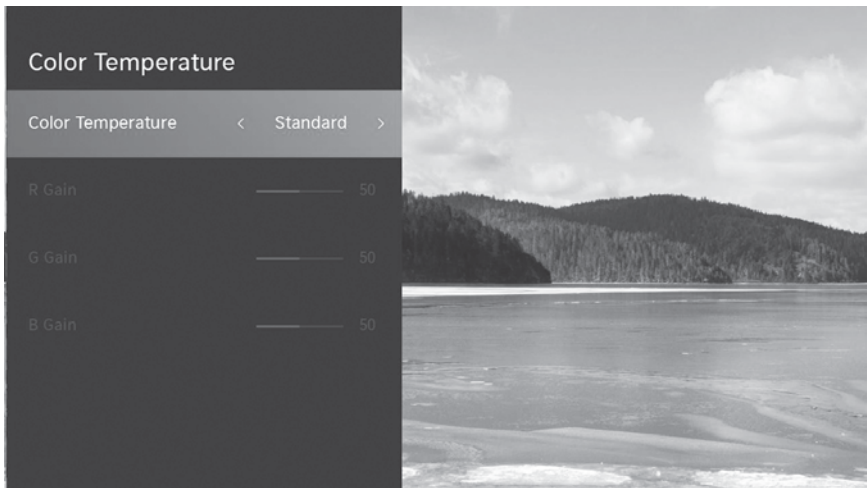

### R Gain/G Gain/B Gain

These terms are available only when "User" is selected in color temperature.

Press ▼ / ▲ button to select R Gain/G Gain/B Gain.

Press ◀ / ▶ button to adjust.

---

---

 
### Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

Press ◀ / ▶ button to select 16:9/4:3/Auto/Movie.

### Advanced Option

Press ▼ / ▲ button to select Advanced Option.

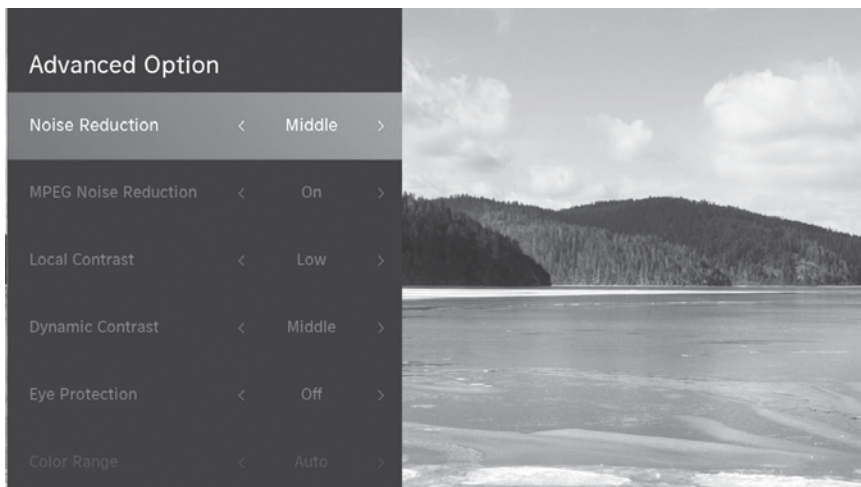

### Noise Reduction

Press ▼ / ▲ button to select Noise Reduction.

Press ◀ / ▶ button to select Off/Low/Middle/High/Auto.

### MPEG Noise Reduction

Press ▼ / ▲ button to select MPEG Noise Reduction.

Press ◀ / ▶ button to select On/Off.

### Local Contrast

Press ▼ / ▲ button to select Local Contrast.

Press ◀ / ▶ button to select Off/Low/Middle/High.

### Dynamic Contrast

Press ▼ / ▲ button to select Dynamic Contrast.

Press / button to select Off/Low/Middle/High.

### Eye Protection

Press ▼ / ▲ button to select Eye Protection.

Press / button to select On/Off.

---

## Color Range

 
Press ▼ / ▲ button to select Color Range.

Press ◀ / ▶ button to select Low/Middle/High/Auto.

## Picture Reset

Press ▼ / ▲ button to select Picture Reset.

Press ◀ / ▶ to select reset or not.


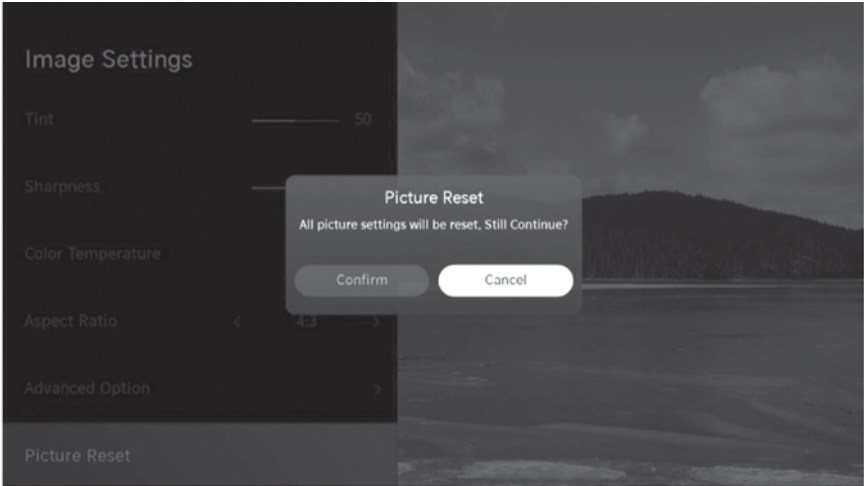


## Sound Settings

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select the Sound.

Press **OK** button to enter the sub-menu.

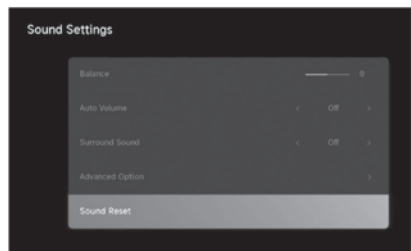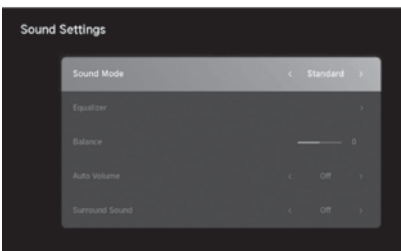

Press ▼ / ▲ button to select Sound Mode/Equalizer/Balance/Auto Volume/Surround Sound/Advanced Option/SoundReset.

Press **MENU** or **EXIT** button to quit.

---

## Sound Mode

Press ▼ / ▲ button to select Sound Mode.

Press ◀ / ▶ button to select Standard/Soccer/Movie/Music/User.

Standard	Emit balanced sound under any circumstances.
Soccer	Enhance the voice .
Movie	Enhances treble and bass for a rich sound experience.
Music	Enhance the high pitch and reduce the bass.
User	Select to customize sound settings.

## Equalizer

Press ▼ / ▲ button on to select Equalizer.

Press OK button to enter sub-menu then press ◀ / ▶ button to adjust.

## Balance

Balanced left and right channels.

Press ▼ / ▲ button to select Balance. Press ◀ / ▶ button to adjust.

## Auto Volume


Press ▼ / ▲ button to select Auto Volume. Press ◀ / ▶ button to select On/Off.

## Surround Sound

Press ▼ / ▲ button to select Surround Sound. Press ◀ / ▶ button to select On/Off.

## Advanced Option

Press ▼ / ▲ button to select Advanced Option. Press OK button to enter sub-menu.

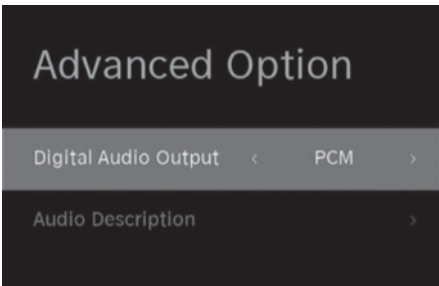

## Digital Audio Output

Press ▼ / ▲ button to select Digital Audio Output. Press ◀ / ▶ button to select AUTO/PCM.

## Audio Description

Press ▼ / ▲ button to select Audio Description. Press OK button to enter sub-menu.

 
---

---

### Sound Reset

Press ▼ / ▲ button to select Sound Reset.

Press ◀ / ▶ to select reset or not.

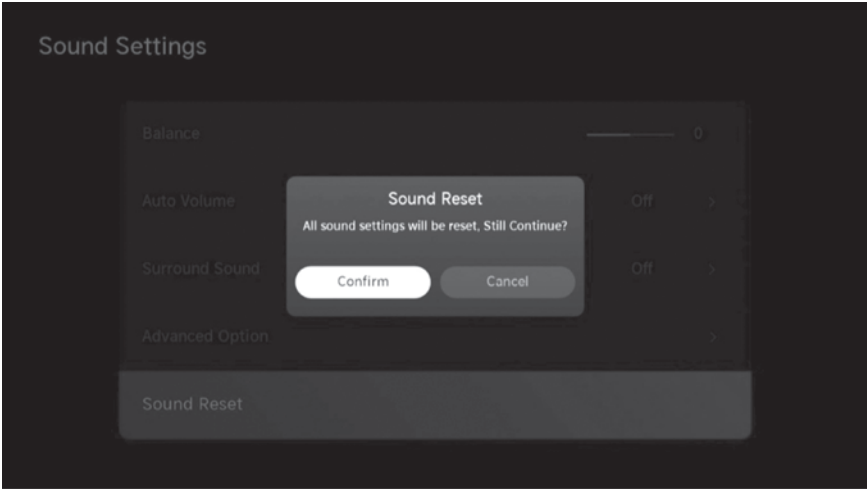


## General Settings

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select the General settings.

 Press **OK** button to enter the sub-menu.

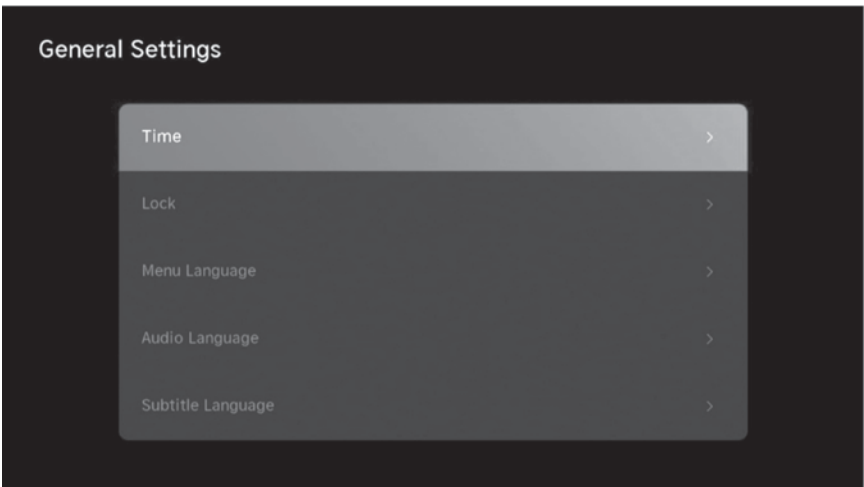



---

## Time

  Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select the Time.

Press **OK** button to enter the sub-menu.

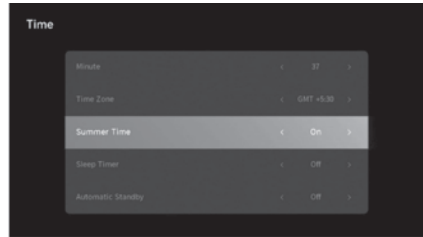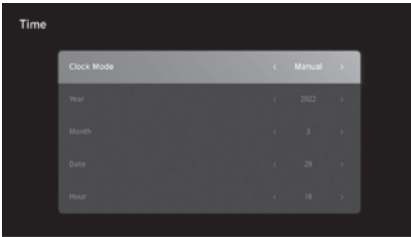

Press **▼ / ▲** button to select Clock Mode/Year/Month/Date/Hour/Minute/Time Zone/  
Summer Time/Sleep Timer/Automatic Standby  
Press **MENU** or **EXIT** button to quit.

### Clock Mode

Press **▼ / ▲** button to select Clock Mode.

Press **◀ / ▶** button to select Auto/Manual.

Year/Month/Date/Hour/Minute are only available when Clock Mode setting "**Manual**".

### Time Zone

Press **▼ / ▲** button on to select Time Zone.

### Summer Time

Press **▼ / ▲** button to select Summer Time. Press **◀ / ▶** button to select On/Off.

### Sleep Time

Press **▼ / ▲** button to select Sleep Time. Press **◀ / ▶** button to select

Off/10 Minutes/20 Minutes/30 Minutes/60 Minutes/90 Minutes/120 Minutes/180 Minutes/240  
Minutes.

### Automatic Standby

Press **▼ / ▲** button to select Automatic Standby. Press **◀ / ▶** button to select Off/4 Hours/  
6 Hours/8 Hours.



 
 
---

## Lock

Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select **Lock**.

Press **OK** button to input password to enter the sub-menu.(Default password is 0000)

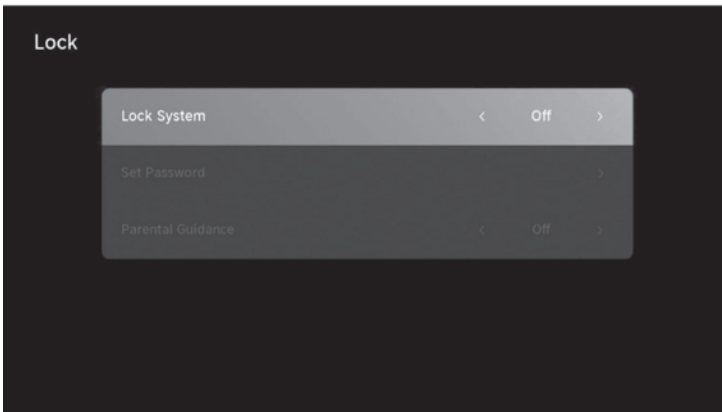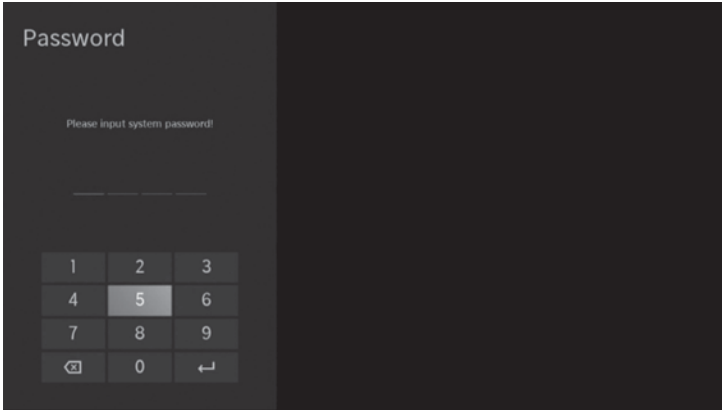

Press **▼ / ▲** button to select Lock System/Set Password/Parental Guidance.

### **Lock System**

Press **▼ / ▲** button to select Lock System.Press **◀ / ▶** button to select On/Off.

### **Set Password**

Press **▼ / ▲** button to select Set Password.Press **OK** button to set Password.

### **Parental Guidance**

Press **▼ / ▲** button to select Parental Guidance.Press **◀ / ▶** button to select Off/4-18.

---

---

## Menu Language

Press ▼ / ▲ button to select Menu Language. Press OK button to enter sub-m

 
## Audio Language

Press ▼ / ▲ button to select Audio Language.

Press OK button to enter sub-menu and press ▼ / ▲ button to select Primary

## Subtitle Language

Press ▼ / ▲ button to select Subtitle Language. Press OK button to enter sub

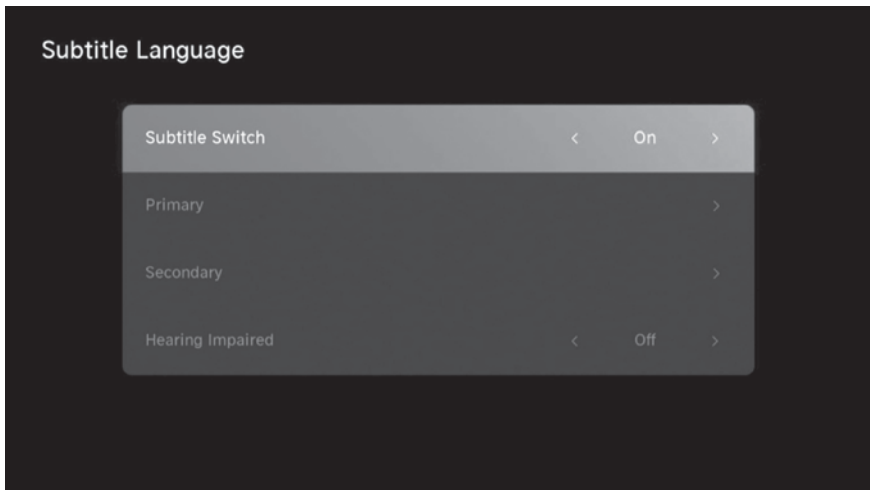

### Subtitle Switch

Press ▼ / ▲ button to select Subtitle Switch. Press ◀ / ▶ button to select On/Off.

### Primary

Press ▼ / ▲ button to select Primary. Press OK button to enter sub-menu.

### Secondary

 
Press ▼ / ▲ button to select Secondary. Press OK button to enter sub-menu.

### Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired. Press ◀ / ▶ button to select On/Off.

---

## Link

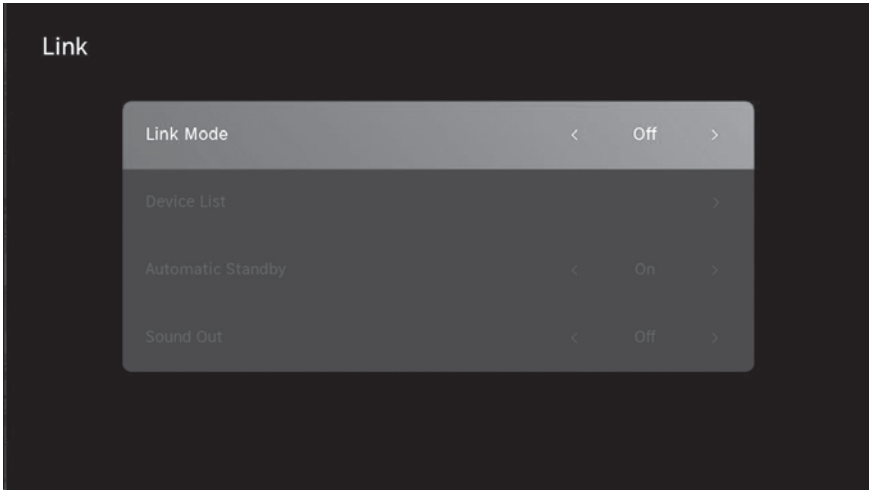

### **Link Mode**

Press ▼ / ▲ button to select Link Mode. Press ◀ / ▶ button to select On/Off.  
The following terms are available only when "On" is selected in Link Mode.

### **Device List**

Press ▼ / ▲ button to select Device List. Press OK button to enter sub-menu.

### **Automatic Standby**

Press ▼ / ▲ button to select Automatic Standby. Press ◀ / ▶ button to select On/Off.

### **Sound Out**

 
 
Press ▼ / ▲ button to select Sound Out. Press ◀ / ▶ button to select On/Off.

---

## Advanced Option

Press ▼ / ▲ button to select Advanced Option.

Press OK button to enter the sub-menu.

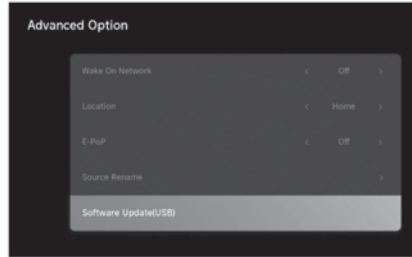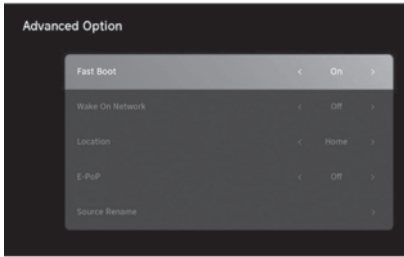

Press ▼ / ▲ button to select Fast Boot/Wake On Network/Location/E-PoP/Source Rename/Software Update(USB).

### Fast Boot

Press ▼ / ▲ button to select Fast Boot, and press ◀ / ▶ button to select On/Off.

### Wake On Network

Press ▼ / ▲ button to select Wake On Network, and press ◀ / ▶ button to select On/Off.

### Location

Press ▼ / ▲ button to select Location, and press ◀ / ▶ to select Home/Shop.

### E-PoP

Press ▼ / ▲ button to select E-PoP, and press ◀ / ▶ button to select On/Off.

### Source Rename

Press ▼ / ▲ button to select Source Rename, and press OK button to enter sub-menu.

### Software Update(USB)

Press ▼ / ▲ button to select Software Update(USB), and press OK button to setup.

 
---

## Restore Default

Recall the default setting.

Press ▼ / ▲ button to select Restore Default.

Press OK button to restore.


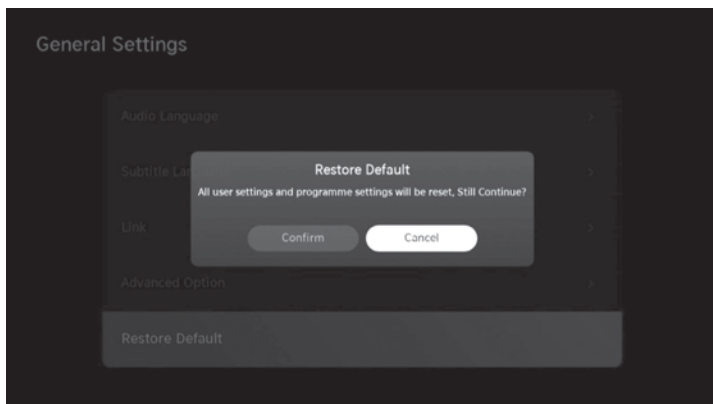


## About This Device

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select **About this device**.

  Press **OK** button to enter the sub-menu.

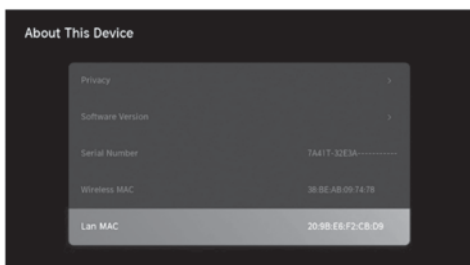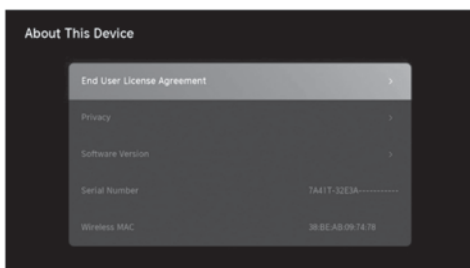

---


## Channel setting

 Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select Channel setting.

Press **OK** button to enter the sub-menu.


### ATV

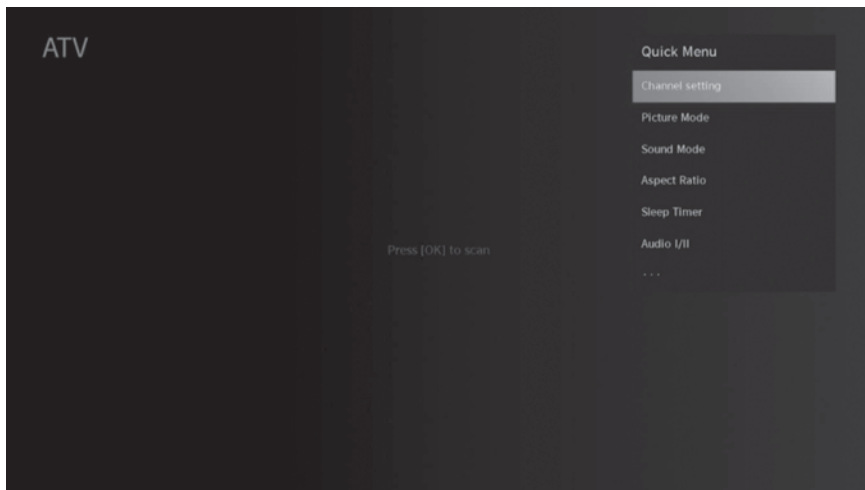

### Tuning

Press **▼ / ▲** button to select Tuning. Press **OK** button to enter the sub-menu.

 Press **◀ / ▶** button to select Auto Tuning/Manual Tuning.

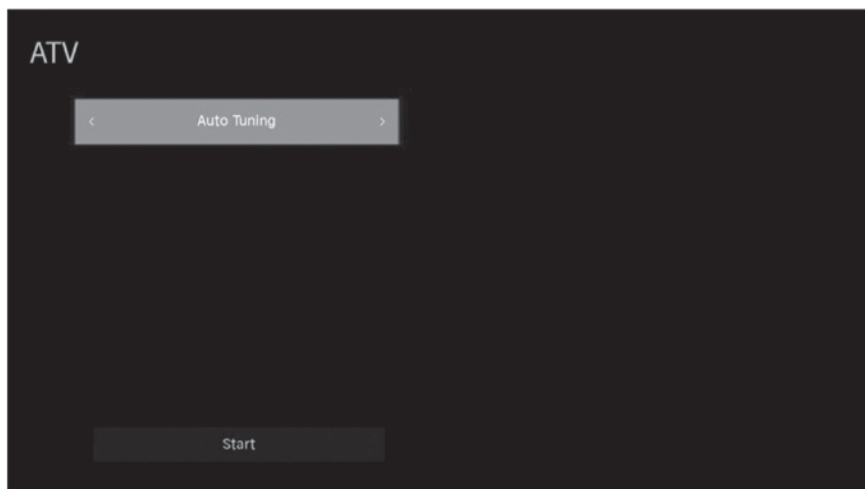

---

## Auto Tuning

Automatic search can search for effective program channel automatically.

Press ◀/▶ button to select Auto Tuning, then press OK button to start auto search.

If you want to stop searching, press EXIT or MENU button to stop searching.

 


## Manual Tuning

Analog manual search can search for effective simulation program channel manually.

Press ◀/▶ button to select Manual Scan, and press OK button to enter the sub-menu.

Press EXIT or MENU button to quit.

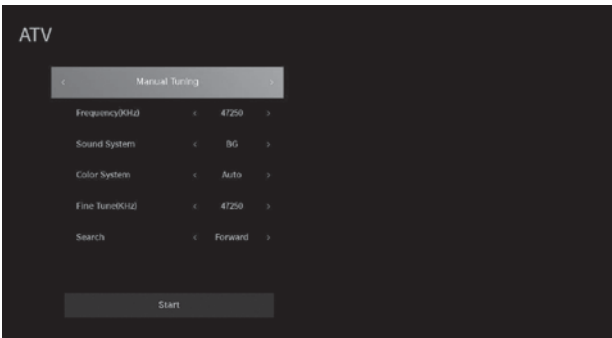

### Frequency(KHz)

Press ▼/▲ button to select Frequency(KHz). Press ◀/▶ button to adjust.

### Sound System

Press ▼/▲ button to select Sound System. Press ◀/▶ button to select DK/BG//I/M.

### Color System

Press ▼/▲ button to select Color System. Press ◀/▶ button to select PAL/SECAM/NTSC/Auto.

### Fine Tune(KHz)

 
Press ▼/▲ button to select Fine Tune(KHz). Press ◀/▶ button to select the channel number.

### Search

Press ▼/▲ button to select Search. Press ◀/▶ button to select the Forward/Backword.

---


## DVB-C

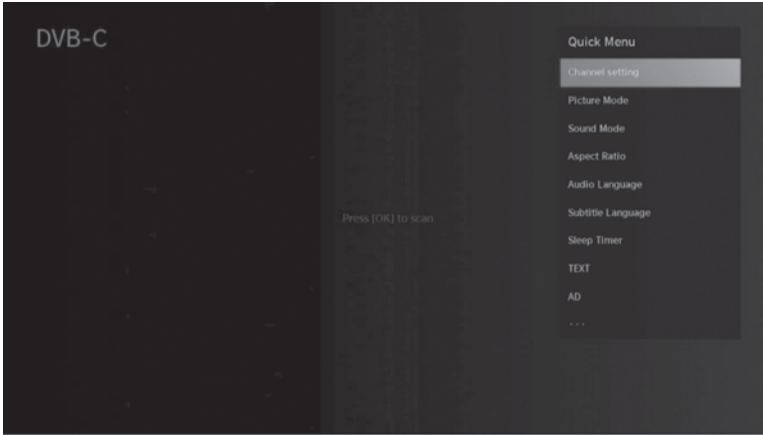

### Tuning

Press **▼ / ▲** button to select Tuning. Press **OK** button to enter the sub-menu.

 Press **◀ / ▶** button to select Auto Tuning/Network Tuning/Manual Tuning.

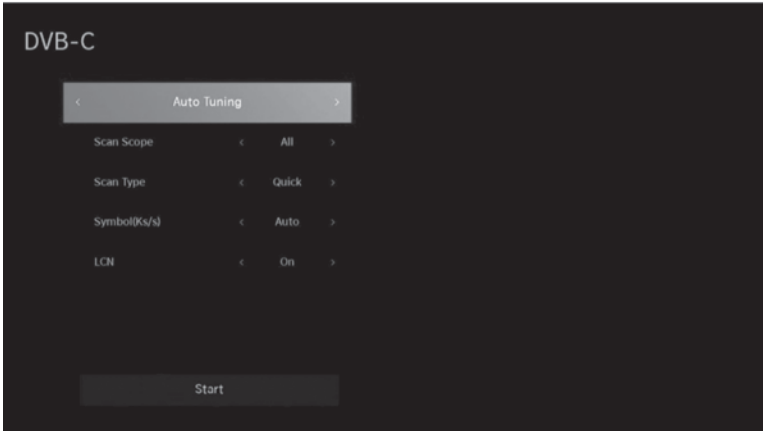

### Scan Scope

Press **▼ / ▲** button to select Scan Scope. Press **◀ / ▶** button to select All/Free/Encrypted.

### Scan Type

Press **▼ / ▲** button to select Scan Type. Press **◀ / ▶** button to select Quick/Full.

### Symbol(Ks/s)

Press **▼ / ▲** button to select Symbol(Ks/s). Press **◀ / ▶** button to select Enter/Auto.

### LCN

Press **▼ / ▲** button to select LCN. Press **◀ / ▶** button to select On/Off.

---



---

## Auto Tuning

Automatic search can search for effective program channel automatically.

Press **▼ / ▲** button to select Auto Tuning, then press **OK** button to start auto search.

 
If you want to stop searching, press **EXIT** or **MENU** button to stop searching.



## Network Tuning

Press **◀ / ▶** button to select Network Tuning, and press **OK** button to enter the sub-menu.

Press **EXIT** or **MENU** button to quit.

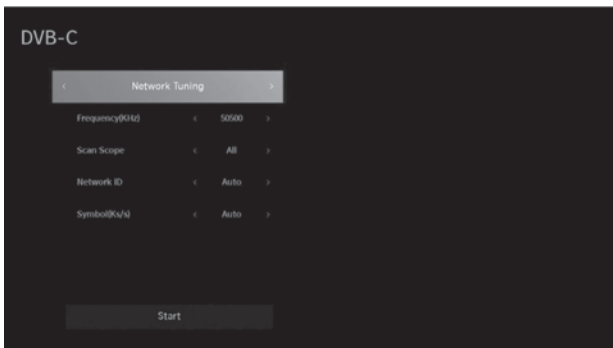

### Frequency(KHz)

Press **▼ / ▲** button to select Frequency(KHz). Press **◀ / ▶** button to adjust.

### Scan Scope

Press **▼ / ▲** button to select Scan Scope. Press **◀ / ▶** button to select All/Free/Encrypted.

### Network ID

Press **▼ / ▲** button to select Network ID. Press **◀ / ▶** button to select Enter/Auto.

### Symbol(Ks/s)

Press **▼ / ▲** button to select Symbol(Ks/s). Press **◀ / ▶** button to select Enter/Auto.

 
---

## Manual Tuning

Analog manual search can search for effective simulation program channel manually.

Press ◀ / ▶ button to select Manual Tuning , and press **OK** button to enter the sub-menu.

Press **EXIT** or **MENU** button to quit.

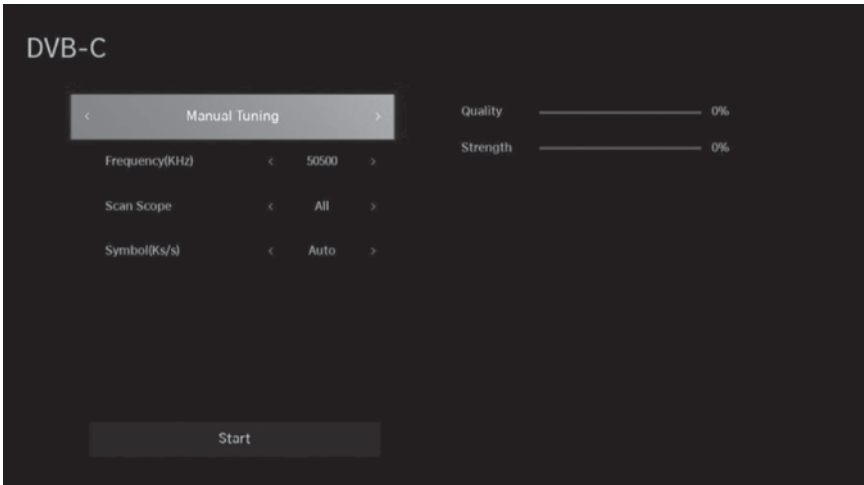

### Frequency(KHz)

Press ▼ / ▲ button to select Frequency(KHz). Press ◀ / ▶ button to adjust.

### Scan Scope

 
Press ▼ / ▲ button to select Scan Scope. Press ◀ / ▶ button to select All/Free/Encrypted.

### Symbol(Ks/s)

Press ▼ / ▲ button to select Symbol(Ks/s). Press ◀ / ▶ button to select Enter/Auto.

---


## DVB-T/T2

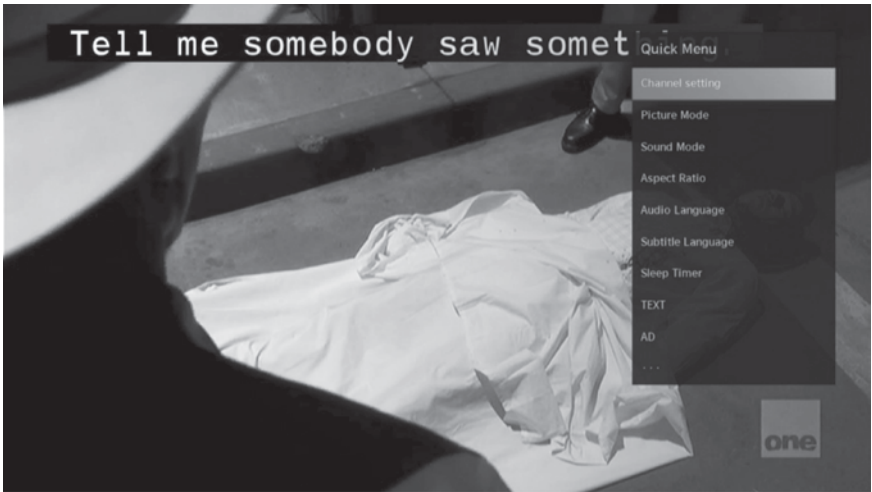

### Tuning

Press **▼ / ▲** button to select Tuning. Press **OK** button to enter the sub-menu.

 Press **◀ / ▶** button to select Auto Tuning/Manual Tuning.

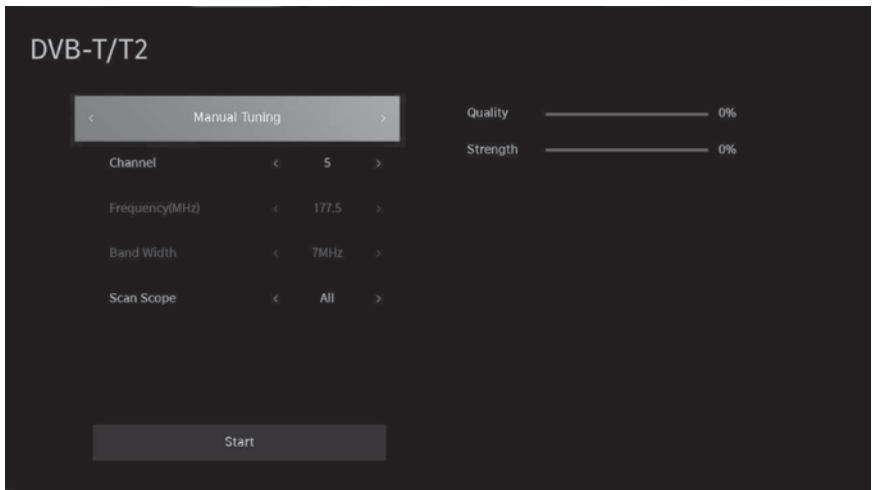

### Scan Scope

Press **▼ / ▲** button to select Scan Scope. Press **◀ / ▶** button to select All/Free/Encrypted.

### LCN

Press **▼ / ▲** button to select LCN. Press **◀ / ▶** button to select On/Off.

---

---

## Auto Tuning

Press ▼ / ▲ button to select Auto Tuning, then press OK button to start auto search.

If you want to stop searching, press EXIT or MENU button to stop searching.

 


## Manual Tuning

Analog manual search can search for effective simulation program channel manually.

Press ◀ / ▶ button to select Manual Tuning, and press OK button to enter the sub-menu.

Press EXIT or MENU button to quit.

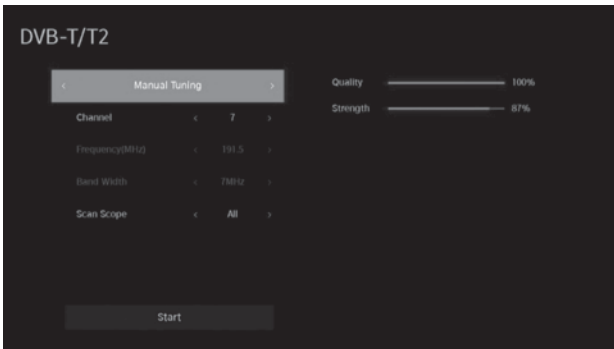

### Channel

Press ▼ / ▲ button to select Channel. Press ◀ / ▶ button to select.

### Frequency(MHZ)

Press ▼ / ▲ button to select Frequency(MHz). Press ◀ / ▶ button to adjust.

### Band Width

Press ▼ / ▲ button to select Band Width. Press ◀ / ▶ button to adjust.

 
### Scan Scope

Press ▼ / ▲ button to select Scan Scope. Press ◀ / ▶ button to select All/Free/Encrypted.

---


## Media

Press ◀ / ▶ button to select Media on the Home page or press **MEDIA** button on the remote, and press **OK** button to enter the Media Center.

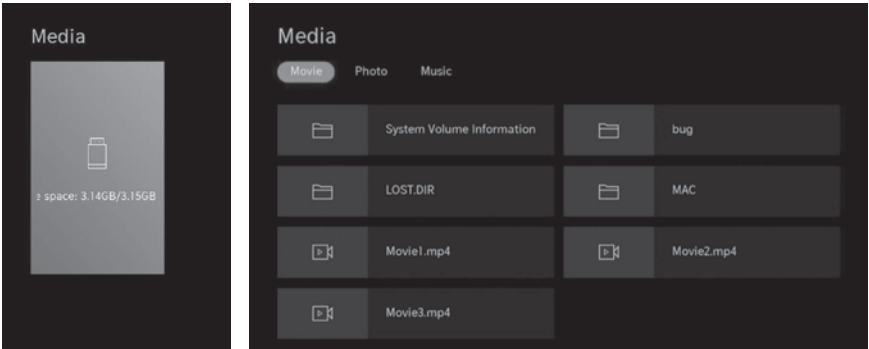

## Movie

 Press ◀ / ▶ button to select Movie, and press ▼ / ▲ / ◀ / ▶ button to select Movies.  
Press Menu button to display the Quick setting options on the right side.

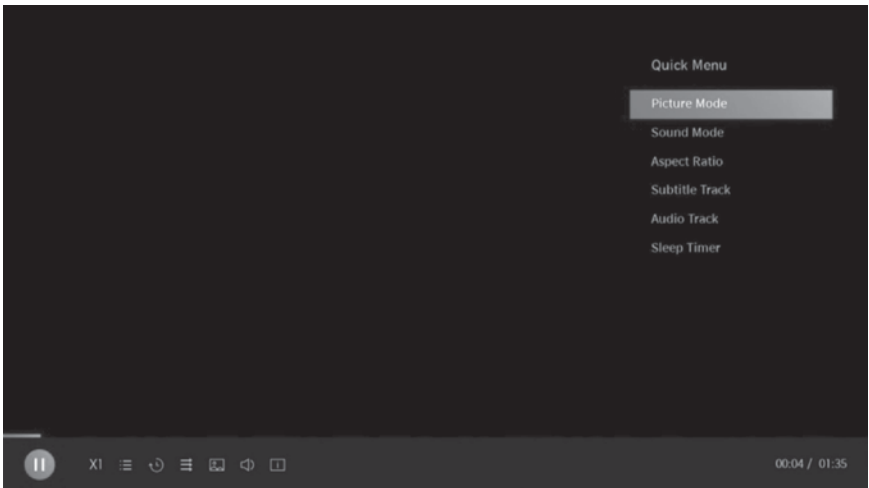

---

## Photo

Press ◀ / ▶ button to select Photo, and press ▼ / ▲ / ◀ / ▶ button to select photos.

 
Press Menu button to display the Quick setting options on the right side.



## Music

Press ◀ / ▶ button to select Music, and press ▼ / ▲ / ◀ / ▶ button to select musics.

Press Menu button to display the Quick setting options on the right side.

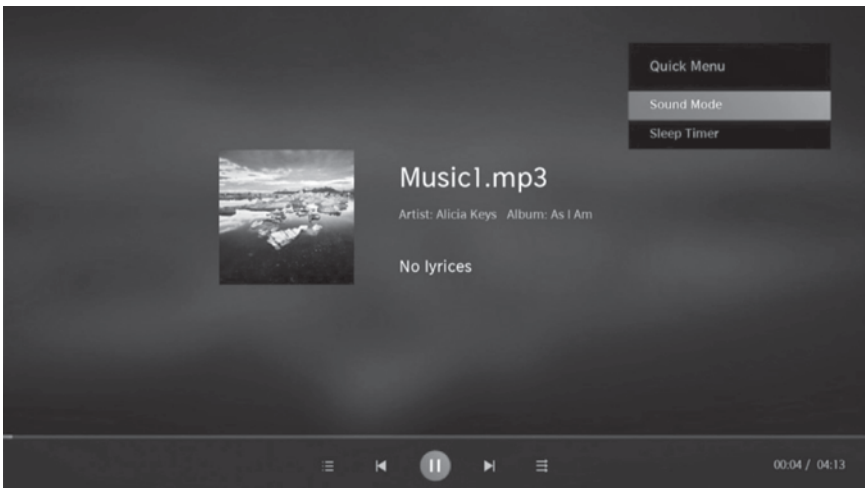





[waltonbd.com](http://waltonbd.com)

Helpline:  
**16267**  
09612316267