

WALTON
Smart TV

Coolita

User Manual



 
To obtain the best performance and safety, please read this manual carefully.
Please keep this manual for future reference.

Contents


Setup Wizard	3
Home page	6
Input	7
Setup	8
Network Settings	9
Image Settings	10
Sound Settings	13
General Settings	15
About This Device	21
Channel setting	22
Media	29

Setup Wizard

The system setting will appear when you open the TV on the first time.
Please set according to the on-screen guide. Press **OK** button to start the setup.
Press **▼ / ▲** button to select the language and press OK button to turn to next page.

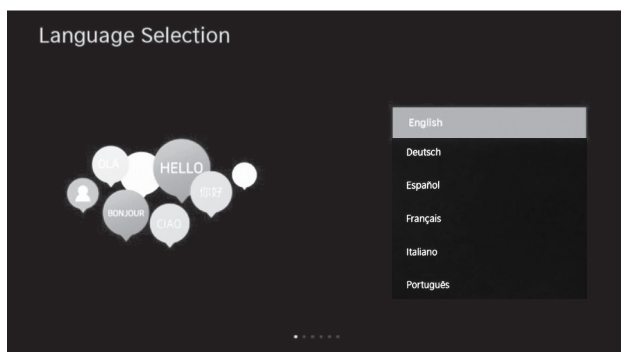

 
Press **▼ / ▲** button to select Country and press OK button to turn to next page..

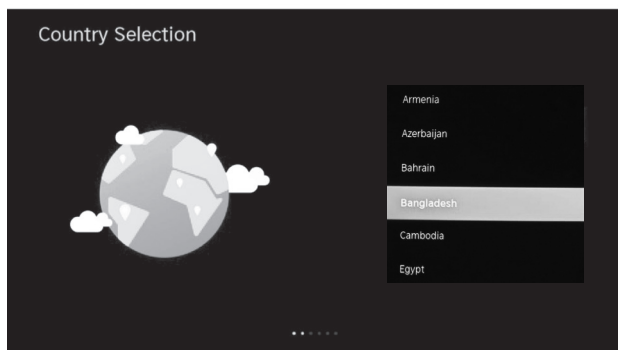

Press **▼ / ▲** button to select Time Zone and press OK button to turn to next page.



 
Press ▼ / ▲ button to select Environment and press OK button to turn to next page.

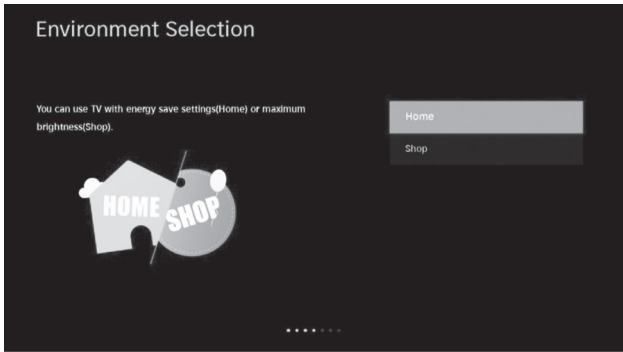


Press ▼ / ▲ button to select Network and press OK button to turn to next page.



Select "Accept " to agree to the Terms of Use & Privacy Policy,
and then choose to enable specific additional service above by individually selecting.

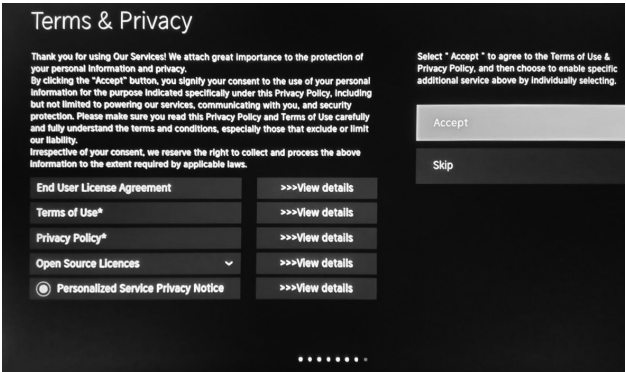


 Press ▼ / ▲ button to select TV source and scan channel.

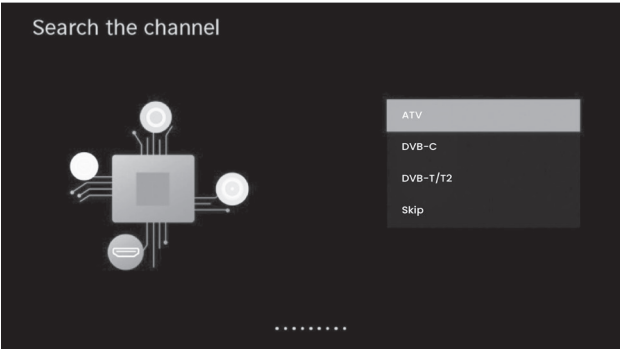

Home page

 Enter the Home page after scan channel.

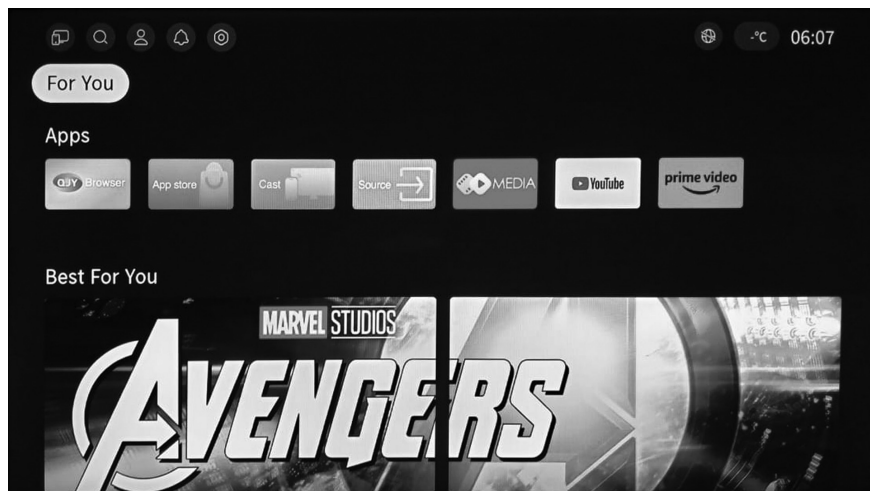

Press ▼ / ▲ / ◀ / ▶ button to select input on the Home page.

Press ◀ / ▶ button to select For You/Anime/Movies/TV Shows/Kids/Short Videos.



Input

Press ▼ / ▲ / ◀ / ▶ button to select input on the Home page.

Press ◀ / ▶ button to select ATV/DVB-C/DVB-T/T2/AV1/AV2/HDMI1/HDMI2.

Press **OK** button to enter. Press **EXIT** button to quit.

 


Setup

Press **MENU** button to enter the Setup.

Press ◀ / ▶ button to highlight the desired menu icon , and press **OK** button to select.

(Optional:Network Settings/Image Settings/Sound Settings/General Settings/About This Device)

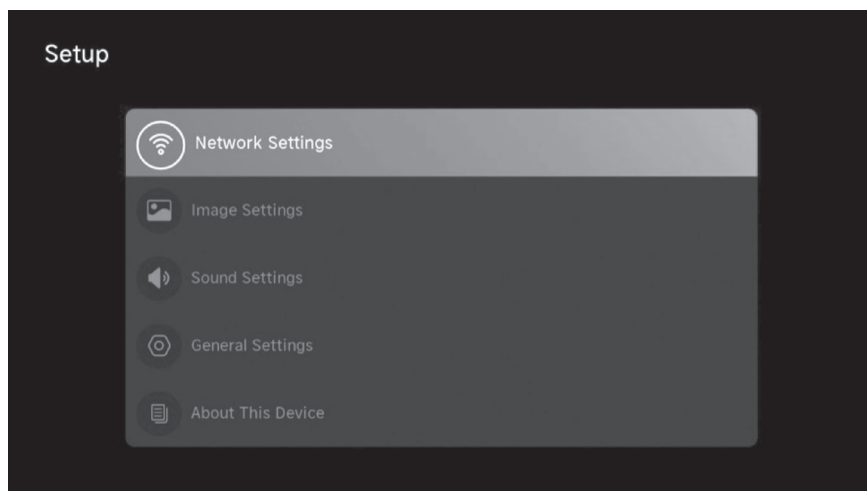


Network Settings

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select **Network Settings**.

 Press **OK** button to enter the sub-menu.

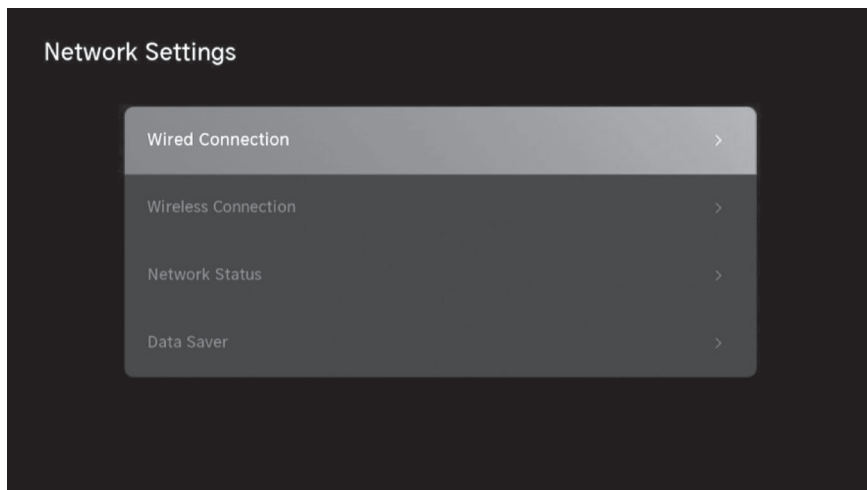


Press ▼ / ▲ button to select Wired Connection/Wireless Connection/Network Status/Data Saver.

Press OK button to enter sub-menu and setup.

Image Settings

 - Press **MENU** button to enter the main menu.
- Press **▼ / ▲** button to select **Image Settings**.
- Press **OK** button to enter the sub-menu.

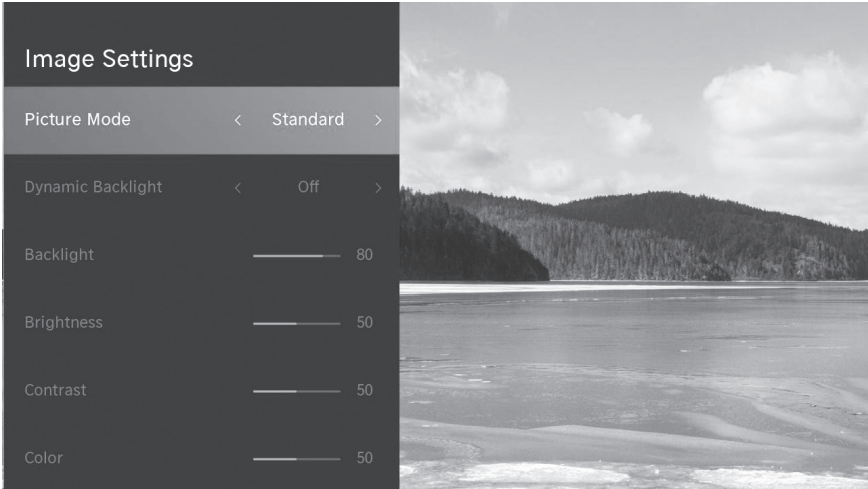

Picture Mode

Highlight the item and press **OK** button to enter the sub-menu, that shows the picture mode you can choose.

Press **◀ / ▶** button to select Standard/Dynamic/Soft/Vivid/User.

- Standard** Produces a standard image.
- Vivid** Enhance the contrast, color and clarity of the screen to make the color more vivid.
- Eco** Reduce screen brightness, improved contrast for energy saving.
- Movie** This mode is more suitable for watching movies.
- Game** This mode is more suitable for playing games.
- Sport** This mode is more suitable for sport programs.
- User** Select to customize picture settings.

Dynamic Backlight

Press **▼ / ▲** button to select Dynamic Backlight and press **◀ / ▶** button to select On/Off

Backlight

- Press **▼ / ▲** button to select Backlight.
- Press **◀ / ▶** button to adjust.

Brightness/Contrast/Color/Tint/Sharpness

These terms are available only when "User" is selected in Picture Mode.

Press ▼ / ▲ button to select Contrast/Brightness/Color/Sharpness.

Press ◀ / ▶ button to adjust.

- Contrast Adjust the contrast of the image.
- Brightness Adjust the brightness of the image.
- Color Adjust the color intensity of the image.
- Sharpness Adjust the edge sharpness of the image.


Color Temperature

Adjust the overall color of the image.

Press ▼ / ▲ button to select Color Temperature.

Press ◀ / ▶ button to select Standard/Warm/User/Cool.

- Standard The picture does not in favor of any color. The color is moderate.
- Warm The picture is in favor of red-green and less blue to make the color more vivid and soft.
- User Select to customize color temperature setting.
- Cool The picture is in favor of green-blue and less red.
 The whole color is in favor of light. The picture is more fresh and elegant.

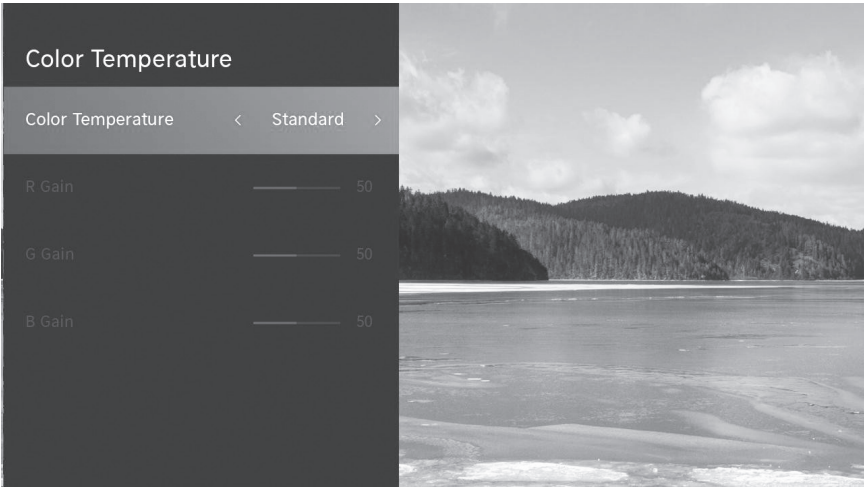 

R Gain/G Gain/B Gain

These terms are available only when "User" is selected in color temperature.

Press ▼ / ▲ button to select R Gain/G Gain/B Gain.

Press ◀ / ▶ button to adjust.

 
Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

Press ◀ / ▶ button to select 16:9/4:3/Auto/Movie.

Advanced Option

Press ▼ / ▲ button to select Advanced Option.

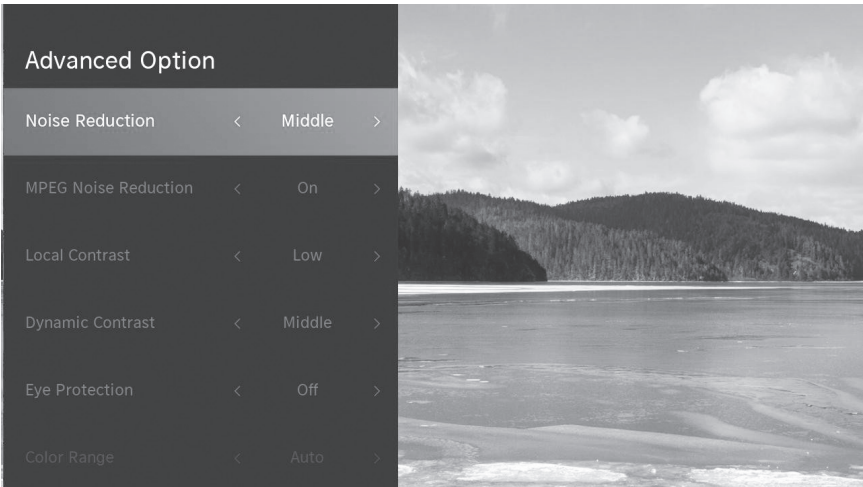

Noise Reduction

Press ▼ / ▲ button to select Noise Reduction.

Press ◀ / ▶ button to select Off/Low/Middle/High/Auto.

MPEG Noise Reduction

Press ▼ / ▲ button to select MPEG Noise Reduction.

Press ◀ / ▶ button to select On/Off.

Local Contrast

Press ▼ / ▲ button to select Local Contrast.

Press ◀ / ▶ button to select Off/Low/Middle/High.

Dynamic Contrast

Press ▼ / ▲ button to select Dynamic Contrast.

Press / button to select Off/Low/Middle/High.

Eye Protection

Press ▼ / ▲ button to select Eye Protection.

Press / button to select On/Off.

Color Range

 
Press ▼ / ▲ button to select Color Range.

Press ◀ / ▶ button to select Low/Middle/High/Auto.

Picture Reset

Press ▼ / ▲ button to select Picture Reset.

Press ◀ / ▶ to select reset or not.


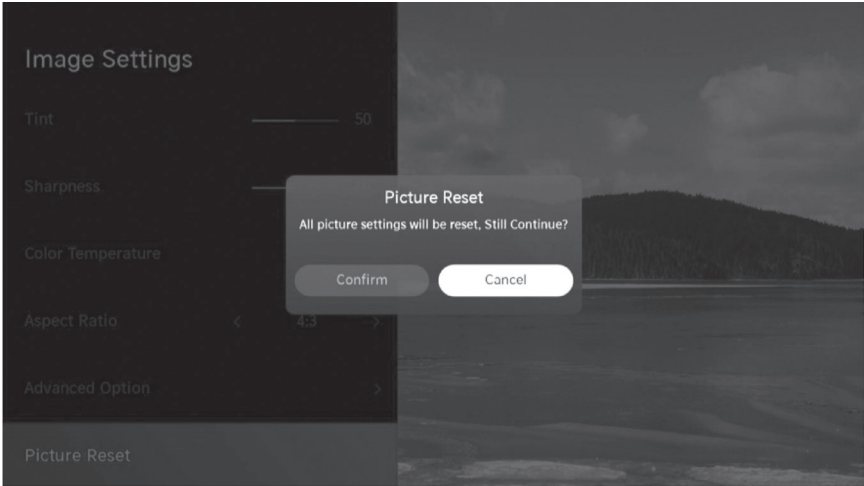


Sound Settings

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select the Sound.

  Press **OK** button to enter the sub-menu.

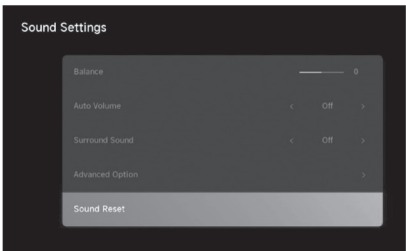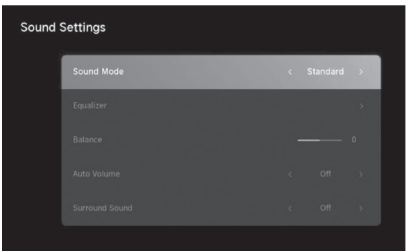

Press ▼ / ▲ button to select Sound Mode/Equalizer/Balance/Auto Volume/Surround Sound/Advanced Option/SoundReset.

Press **MENU** or **EXIT** button to quit.

Sound Mode

Press ▼ / ▲ button to select Sound Mode.

Press ◀ / ▶ button to select Standard/Soccer/Movie/Music/User.

Standard	Emit balanced sound under any circumstances.
Soccer	Enhance the voice .
Movie	Enhances treble and bass for a rich sound experience.
Music	Enhance the high pitch and reduce the bass.
User	Select to customize sound settings.

Equalizer

Press ▼ / ▲ button on to select Equalizer.

Press OK button to enter sub-menu then press ◀ / ▶ button to adjust.

Balance

Balanced left and right channels.

Press ▼ / ▲ button to select Balance. Press ◀ / ▶ button to adjust.

Auto Volume

 
Press ▼ / ▲ button to select Auto Volume. Press ◀ / ▶ button to select On/Off.

Surround Sound

Press ▼ / ▲ button to select Surround Sound. Press ◀ / ▶ button to select On/Off.

Advanced Option

Press ▼ / ▲ button to select Advanced Option. Press OK button to enter sub-menu.

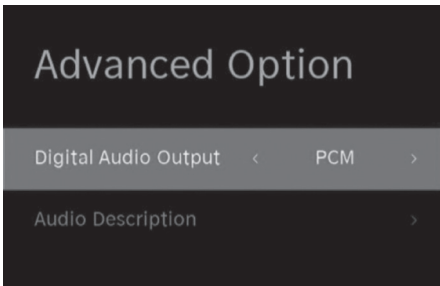

Digital Audio Output

Press ▼ / ▲ button to select Digital Audio Output. Press ◀ / ▶ button to select AUTO/PCM.

 
Audio Description

Press ▼ / ▲ button to select Audio Description. Press OK button to enter sub-menu.

Sound Reset

Press ▼ / ▲ button to select Sound Reset.

Press ◀ / ▶ to select reset or not.

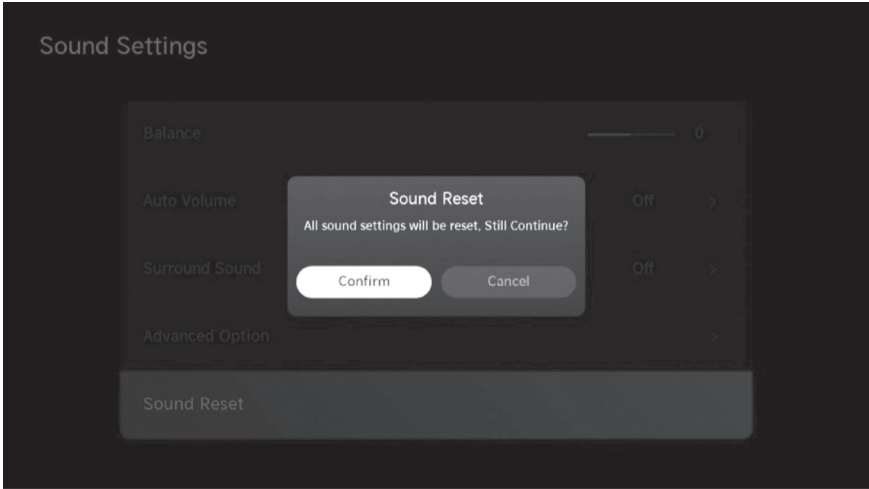


General Settings

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select the General settings.

 Press **OK** button to enter the sub-menu.


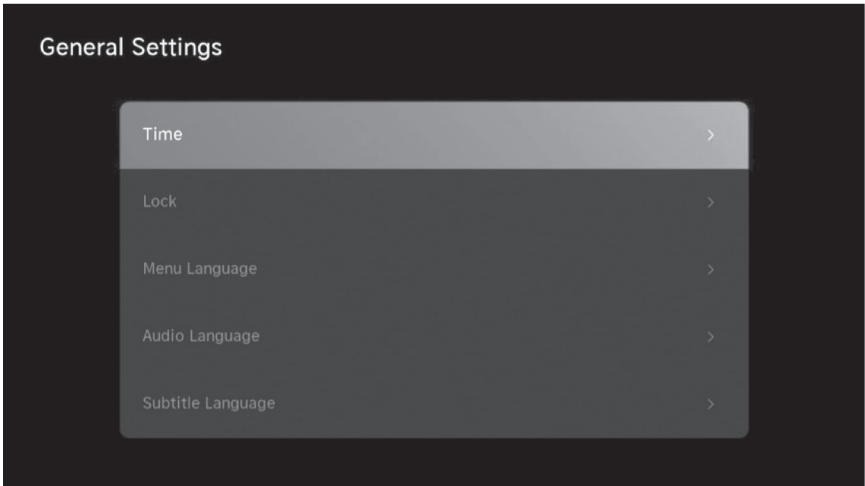


Time

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select the Time.

  Press **OK** button to enter the sub-menu.

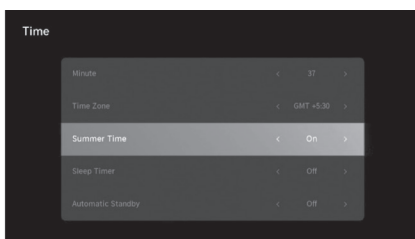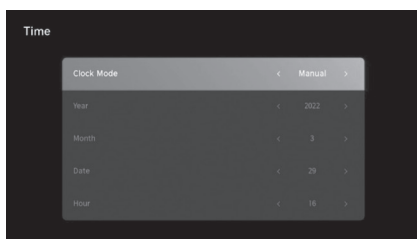

Press ▼ / ▲ button to select Clock Mode/Year/Month/Date/Hour/Minute/Time Zone/

Summer Time/Sleep Timer/Automatic Standby

Press **MENU** or **EXIT** button to quit.

Clock Mode

Press ▼ / ▲ button to select Clock Mode.

Press ◀ / ▶ button to select Auto/Manual.

Year/Month/Date/Hour/Minute are only available when Clock Mode setting "**Manual**".

Time Zone

Press ▼ / ▲ button on to select Time Zone.

Summer Time

Press ▼ / ▲ button to select Summer Time. Press ◀ / ▶ button to select On/Off.

Sleep Time

Press ▼ / ▲ button to select Sleep Time. Press ◀ / ▶ button to select

Off/10 Minutes/20 Minutes/30 Minutes/60 Minutes/90 Minutes/120 Minutes/180 Minutes/240 Minutes.

Automatic Standby

 
 
Press ▼ / ▲ button to select Automatic Standby. Press ◀ / ▶ button to select Off/4 Hours/ 6 Hours/8 Hours.

Lock

Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select **Lock**.

Press **OK** button to input password to enter the sub-menu.(Default password is 0000)

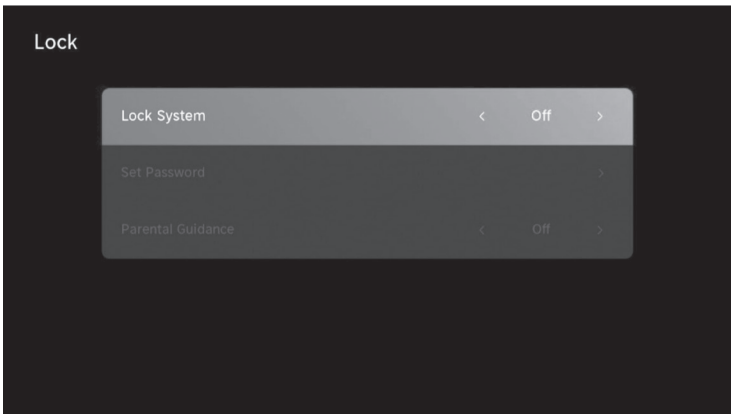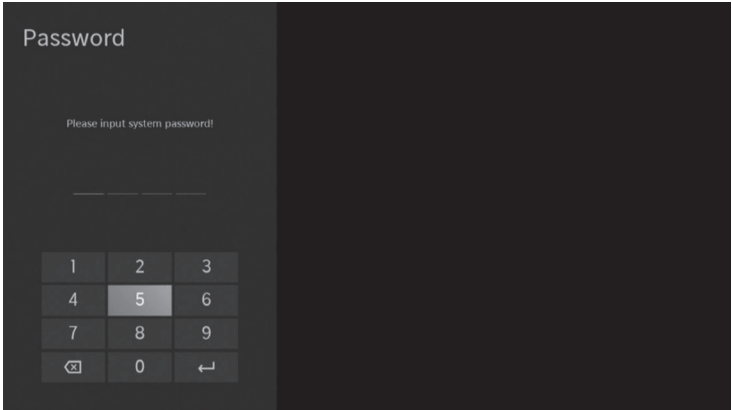

Press **▼ / ▲** button to select Lock System/Set Password/Parental Guidance.

Lock System

Press **▼ / ▲** button to select Lock System.Press **◀ / ▶** button to select On/Off.

Set Password

Press **▼ / ▲** button to select Set Password.Press **OK** button to set Password.

Parental Guidance

Press **▼ / ▲** button to select Parental Guidance.Press **◀ / ▶** button to select Off/4~18.

Menu Language

Press ▼ / ▲ button to select Menu Language. Press OK button to enter sub-m

 
Audio Language

Press ▼ / ▲ button to select Audio Language.

Press OK button to enter sub-menu and press ▼ / ▲ button to select Primary

Subtitle Language

Press ▼ / ▲ button to select Subtitle Language. Press OK button to enter sub

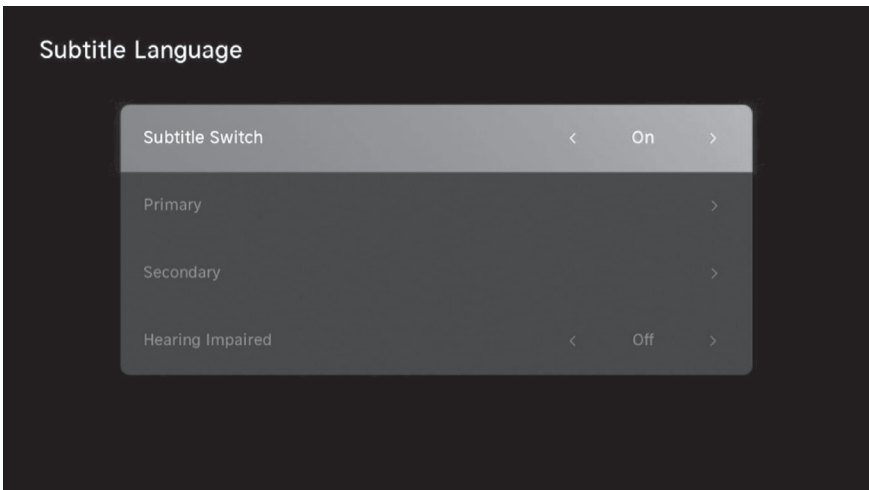

Subtitle Switch

Press ▼ / ▲ button to select Subtitle Switch. Press ◀ / ▶ button to select On/Off.

Primary

Press ▼ / ▲ button to select Primary. Press OK button to enter sub-menu.

 
Secondary

Press ▼ / ▲ button to select Secondary. Press OK button to enter sub-menu.

Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired. Press ◀ / ▶ button to select On/Off.

Link

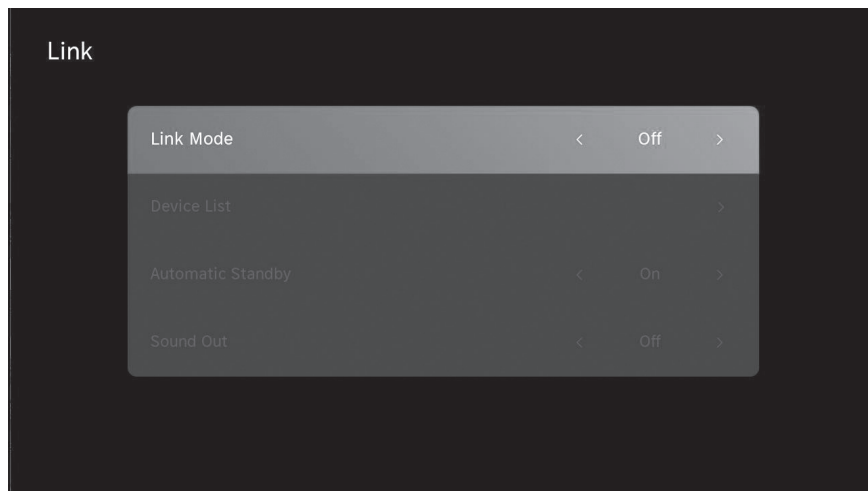

Link Mode

Press ▼ / ▲ button to select Link Mode. Press ◀ / ▶ button to select On/Off.

The following terms are available only when "On" is selected in Link Mode.

Device List

Press ▼ / ▲ button to select Device List. Press OK button to enter sub-menu.

Automatic Standby

Press ▼ / ▲ button to select Automatic Standby. Press ◀ / ▶ button to select On/Off.

 
 
Sound Out

Press ▼ / ▲ button to select Sound Out. Press ◀ / ▶ button to select On/Off.

Advanced Option

Press ▼ / ▲ button to select Advanced Option.

Press OK button to enter the sub-menu.

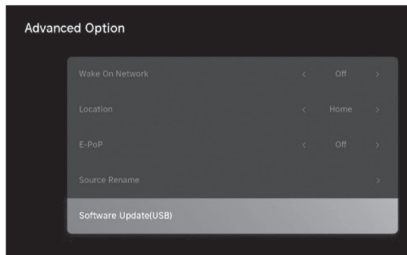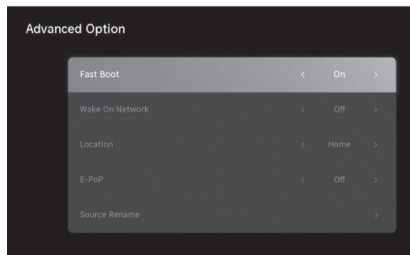

Press ▼ / ▲ button to select Fast Boot/Wake On Network/Location/E-PoP/Source Rename/Software Update(USB).

Fast Boot

Press ▼ / ▲ button to select Fast Boot, and press ◀ / ▶ button to select On/Off.

Wake On Network

Press ▼ / ▲ button to select Wake On Network, and press ◀ / ▶ button to select On/Off.

Location

Press ▼ / ▲ button to select Location, and press ◀ / ▶ to select Home/Shop.

E-PoP

Press ▼ / ▲ button to select E-PoP, and press ◀ / ▶ button to select On/Off.

Source Rename

Press ▼ / ▲ button to select Source Rename, and press OK button to enter sub-menu.

Software Update(USB)

 
Press ▼ / ▲ button to select Software Update(USB), and press OK button to setup.

Restore Default

Recall the default setting.

Press ▼ / ▲ button to select Restore Default.

Press OK button to restore.


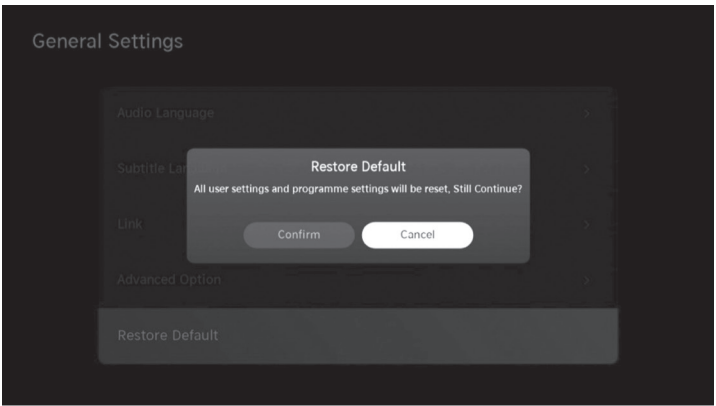


About This Device

Press **MENU** button to enter the main menu.

Press ▼ / ▲ button to select **About this device**.

  Press **OK** button to enter the sub-menu.

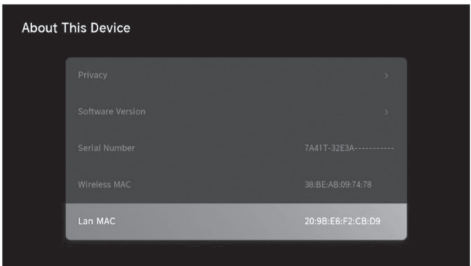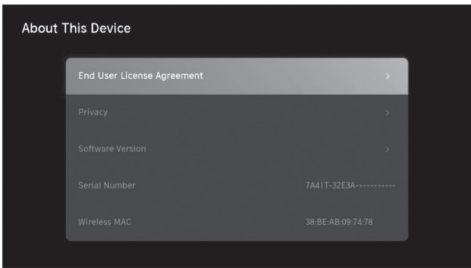


Channel setting

Press **MENU** button to enter the main menu.

Press **▼ / ▲** button to select Channel setting.

Press **OK** button to enter the sub-menu.

 
ATV

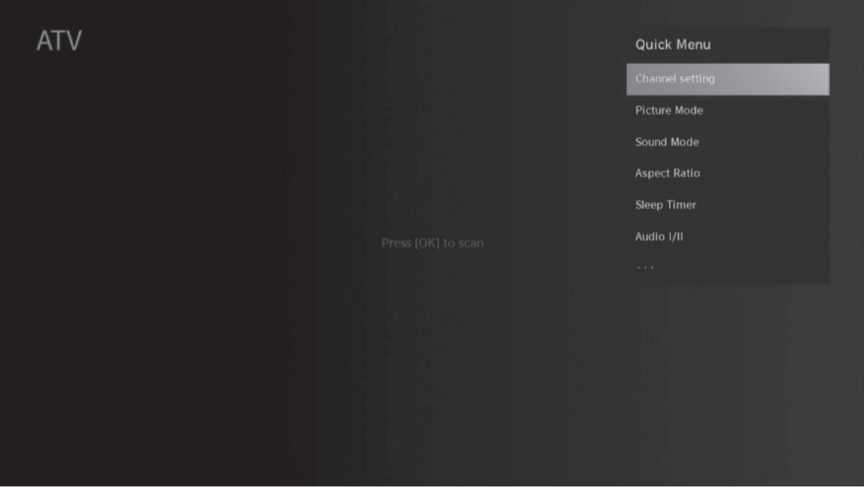

Tuning

Press **▼ / ▲** button to select Tuning. Press **OK** button to enter the sub-menu.

 Press **◀ / ▶** button to select Auto Tuning/Manual Tuning.

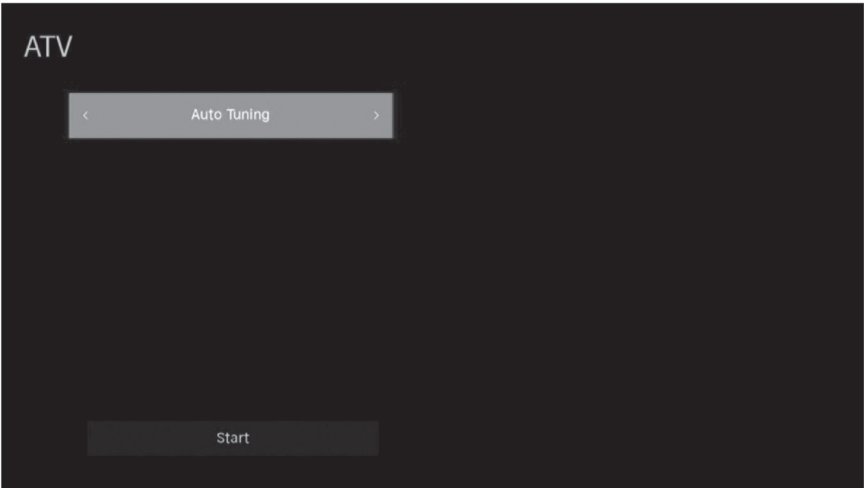


Auto Tuning

Automatic search can search for effective program channel automatically.

Press ◀/▶ button to select Auto Tuning, then press **OK** button to start auto search.

 If you want to stop searching, press **EXIT** or **MENU** button to stop searching.

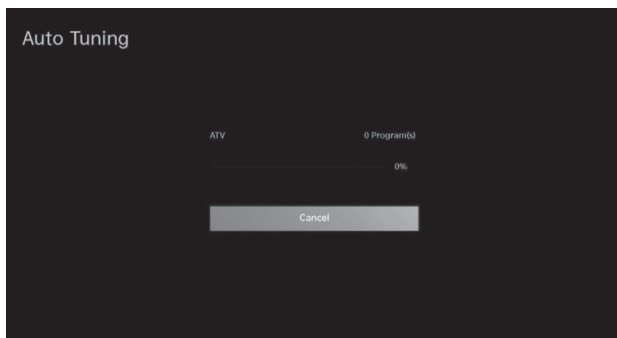


Manual Tuning

Analog manual search can search for effective simulation program channel manually.

Press ◀/▶ button to select Manual Scan , and press **OK** button to enter the sub-menu.

 Press **EXIT** or **MENU** button to quit.

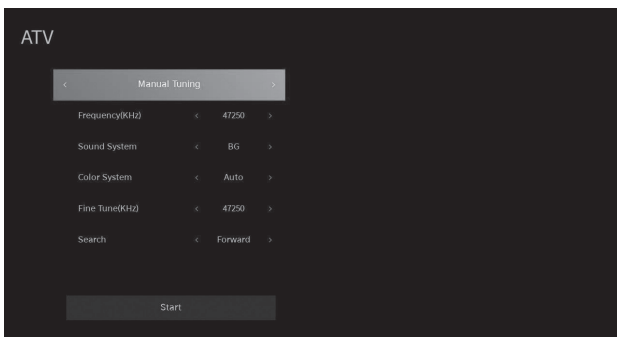

Frequency(KHz)

Press ▼/▲ button to select Frequency(KHz). Press ◀/▶ button to adjust.

Sound System

Press ▼/▲ button to select Sound System. Press ◀/▶ button to select DK/BG/I//M.

Color System

Press ▼/▲ button to select Color System. Press ◀/▶ button to select PAL/SECAM/NTSC/Auto.

 
Fine Tune(KHz)

Press ▼/▲ button to select Fine Tune(KHz). Press ◀/▶ button to select the channel number.

Search

Press ▼/▲ button to select Search. Press ◀/▶ button to select the Forward/Backword.


DVB-C

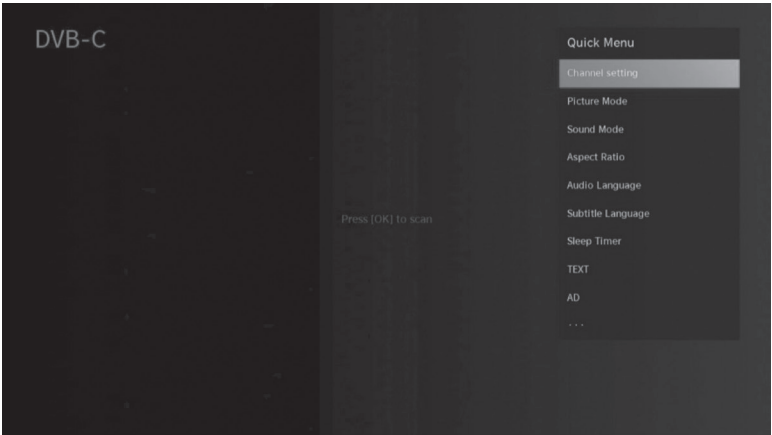

Tuning

Press ▼ / ▲ button to select Tuning. Press **OK** button to enter the sub-menu.

 Press ◀ / ▶ button to select Auto Tuning/Network Tuning/Manual Tuning.

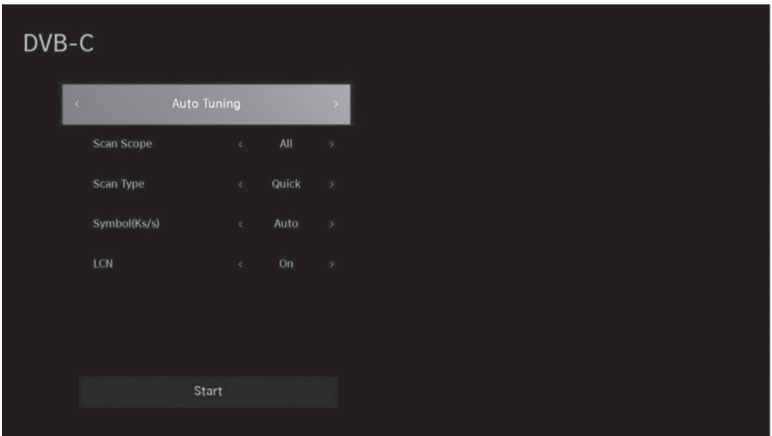

Scan Scope

Press ▼ / ▲ button to select Scan Scope. Press ◀ / ▶ button to select All/Free/Encrypted.

Scan Type

Press ▼ / ▲ button to select Scan Type. Press ◀ / ▶ button to select Quick/Full.

Symbol(Ks/s)

Press ▼ / ▲ button to select Symbol(Ks/s). Press ◀ / ▶ button to select Enter/Auto.

LCN

 
Press ▼ / ▲ button to select LCN. Press ◀ / ▶ button to select On/Off.

Auto Tuning

Automatic search can search for effective program channel automatically.

Press **▼ / ▲** button to select Auto Tuning, then press **OK** button to start auto search.


If you want to stop searching, press **EXIT** or **MENU** button to stop searching.

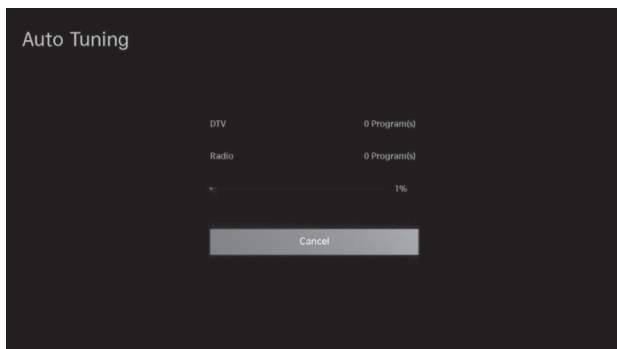

Network Tuning

Press **◀ / ▶** button to select Network Tuning, and press **OK** button to enter the sub-menu.

 Press **EXIT** or **MENU** button to quit.

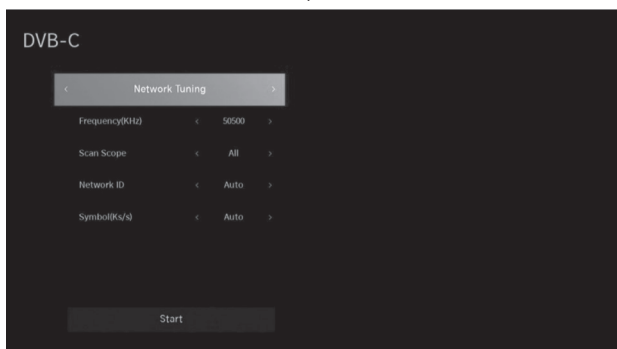

Frequency(KHz)

Press **▼ / ▲** button to select Frequency(KHz). Press **◀ / ▶** button to adjust.

Scan Scope

Press **▼ / ▲** button to select Scan Scope. Press **◀ / ▶** button to select All/Free/Encrypted.

Network ID

Press **▼ / ▲** button to select Network ID. Press **◀ / ▶** button to select Enter/Auto.

Symbol(Ks/s)

 
Press **▼ / ▲** button to select Symbol(Ks/s). Press **◀ / ▶** button to select Enter/Auto.

Manual Tuning

Analog manual search can search for effective simulation program channel manually.

Press ◀ / ▶ button to select Manual Tuning , and press **OK** button to enter the sub-menu.

Press **EXIT** or **MENU** button to quit.

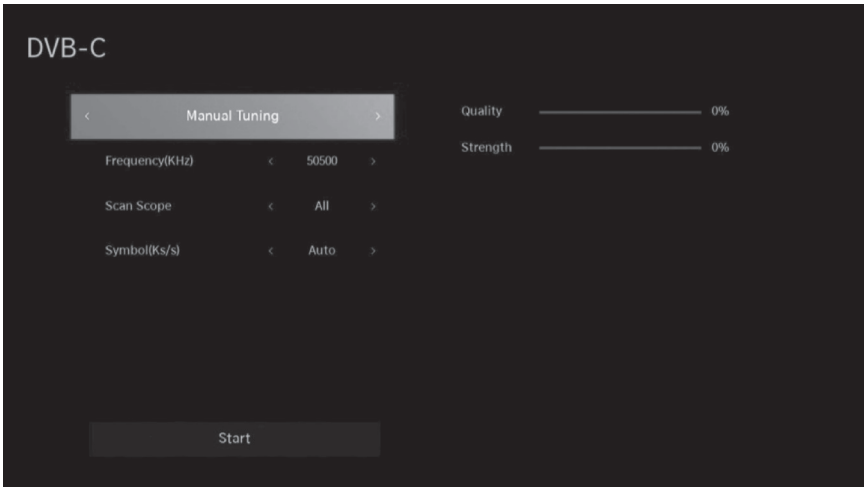

Frequency(KHz)

Press ▼ / ▲ button to select Frequency(KHz). Press ◀ / ▶ button to adjust.

 
Scan Scope

Press ▼ / ▲ button to select Scan Scope. Press ◀ / ▶ button to select All/Free/Encrypted.

Symbol(Ks/s)

Press ▼ / ▲ button to select Symbol(Ks/s). Press ◀ / ▶ button to select Enter/Auto.


DVB-T/T2

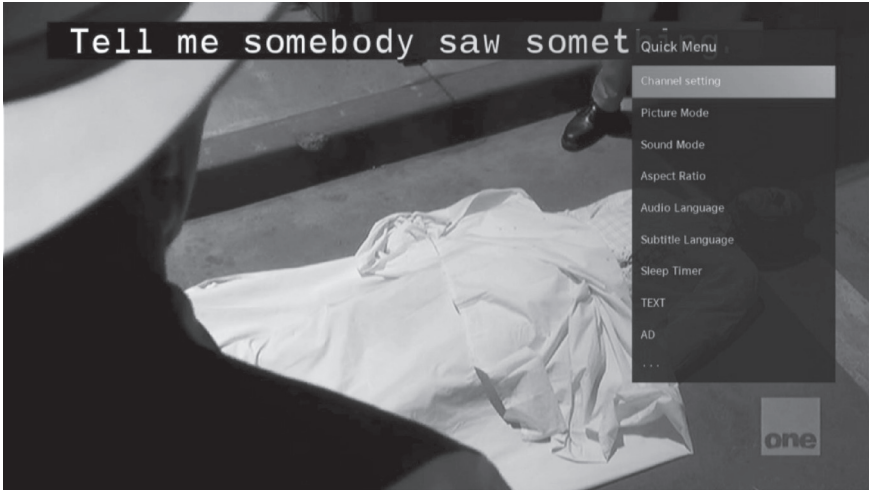

Tuning

Press ▼ / ▲ button to select Tuning. Press **OK** button to enter the sub-menu.

 Press ◀ / ▶ button to select Auto Tuning/Manual Tuning.

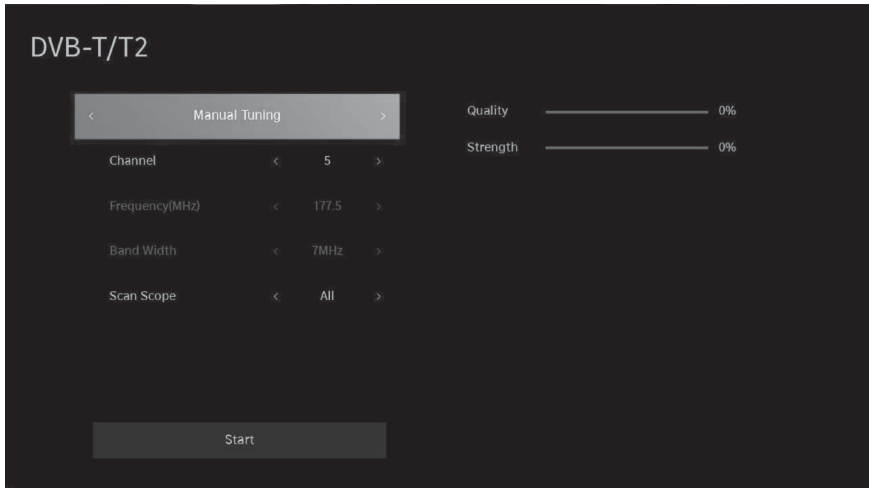

Scan Scope

Press ▼ / ▲ button to select Scan Scope. Press ◀ / ▶ button to select All/Free/Encrypted.

LCN

Press ▼ / ▲ button to select LCN. Press ◀ / ▶ button to select On/Off.

 
Auto Tuning

Press **▼ / ▲** button to select Auto Tuning, then press **OK** button to start auto search.
If you want to stop searching, press **EXIT** or **MENU** button to stop searching.



Manual Tuning

Analog manual search can search for effective simulation program channel manually.
Press **◀ / ▶** button to select Manual Tuning , and press **OK** button to enter the sub-menu.
Press **EXIT** or **MENU** button to quit.

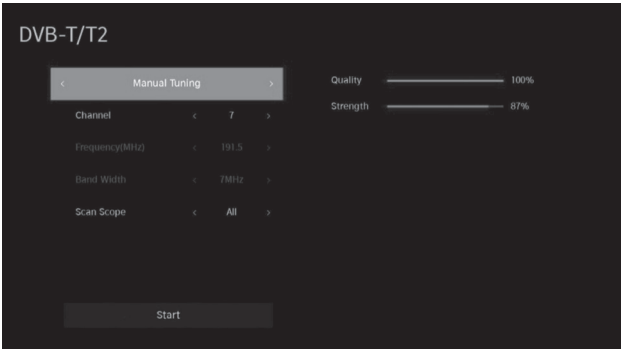

Channel

Press **▼ / ▲** button to select Channel. Press **◀ / ▶** button to select.

Frequency(MHZ)

Press **▼ / ▲** button to select Frequency(MHz). Press **◀ / ▶** button to adjust.

Band Width

 
Press **▼ / ▲** button to select Band Width. Press **◀ / ▶** button to adjust.

Scan Scope

Press **▼ / ▲** button to select Scan Scope. Press **◀ / ▶** button to select All/Free/Encrypted.


Media

Press ◀ / ▶ button to select Media on the Home page or press **MEDIA** button on the remote, and press **OK** button to enter the Media Center.

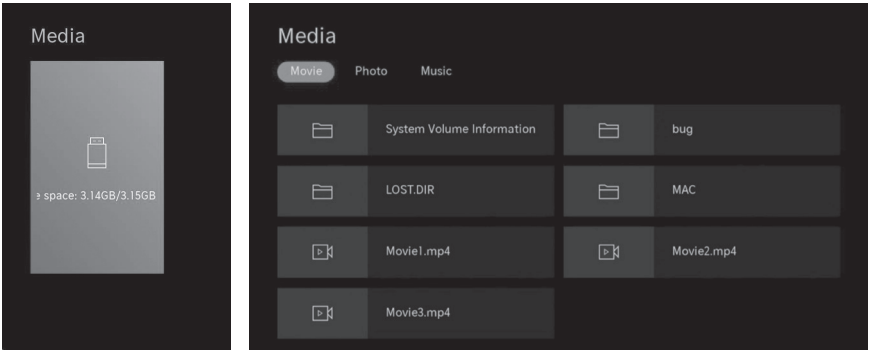

Movie

 Press ◀ / ▶ button to select Movie, and press ▼ / ▲ / ◀ / ▶ button to select Movies.
Press Menu button to display the Quick setting options on the right side.

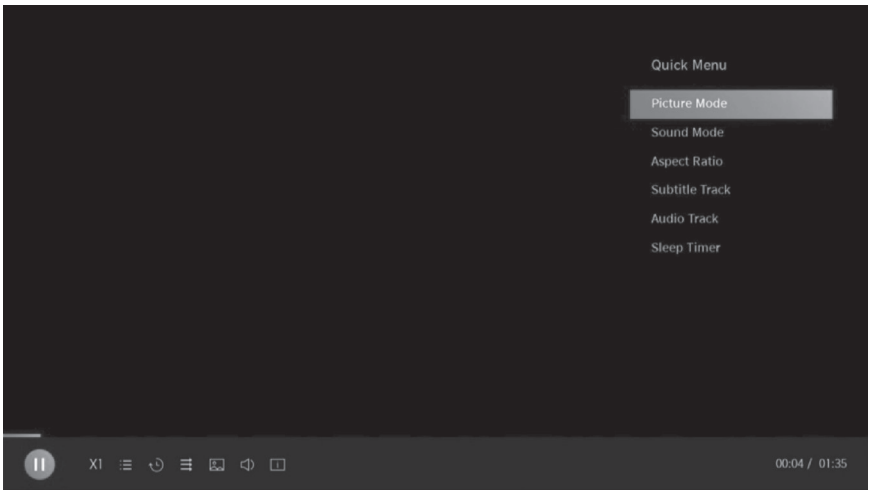

Photo

Press ◀ / ▶ button to select Photo, and press ▼ / ▲ / ◀ / ▶ button to select photos.

 
Press Menu button to display the Quick setting options on the right side.



Music

Press ◀ / ▶ button to select Music, and press ▼ / ▲ / ◀ / ▶ button to select musics.

Press Menu button to display the Quick setting options on the right side.

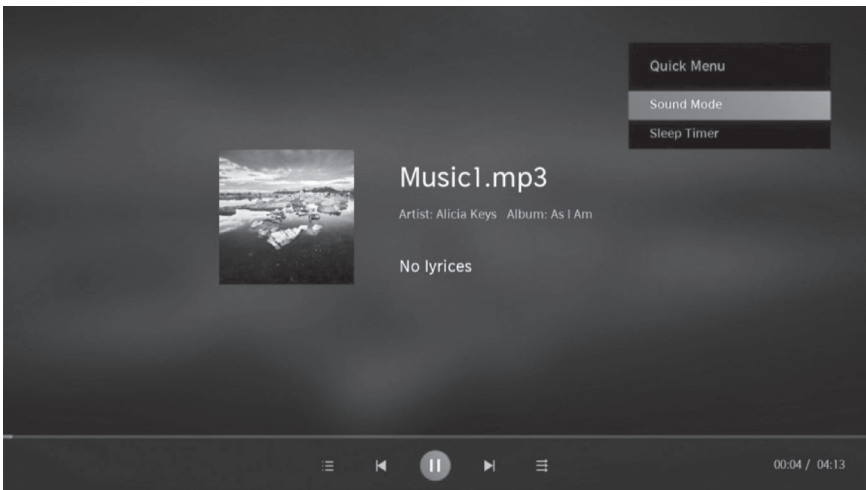



waltonbd.com